

REVISED STARTING  
SERIAL # 220110312



## PARTS LIST MANUAL

# CRETE-PLANE® MODEL CPM10



SHOWN WITH OPTIONAL LIFTING BAIL

### 10" WALK BEHIND CRETE-PLANERS®

SKU #	MODEL #	POWER OPTION
69100	CPM10-13H	HONDA GASOLINE ENGINE MODEL GX390
69200-230	CPM10-7.5B/230/3	BALDOR ELECTRIC MOTOR 7.5HP 60Hz 3PH 230V
69200-460	CPM10-7.5B/460/3	BALDOR ELECTRIC MOTOR 7.5HP 60Hz 3PH 460V

**READ AND UNDERSTAND THE OPERATOR'S SAFETY MANUAL THOROUGHLY  
BEFORE ATTEMPTING TO OPERATE THIS EQUIPMENT.**

Death or serious injury could occur if this machine is used improperly.

Machine specific Operator's Instruction Manuals are offered at [edcoinc.com/customer-resources/manuals-parts-lists/](http://edcoinc.com/customer-resources/manuals-parts-lists/)  
READ AND UNDERSTAND THE ENGINE MANUFACTURERS INSTRUCTIONS AND OPERATORS MANUAL BEFORE OPERATION.



### EQUIPMENT DEVELOPMENT COMPANY, INC.

100 Thomas Johnson Drive, Frederick, MD 21702-4600 USA  
Phone: 800-638-3326 or 301-663-1600 • Fax: 800-447-3326 or 301-663-1607  
Website: [www.edcoinc.com](http://www.edcoinc.com) • E-mail: [techsupport@edcoinc.com](mailto:techsupport@edcoinc.com)

Printed in USA  
JWA ©2022



## SAFETY INFORMATION



### SAFETY MESSAGES

- Safety Instructions are preceded by a graphic alert symbol of DANGER, WARNING, or CAUTION.

**DANGER**

Indicates an imminent hazard which, if not avoided, will result in death or serious injury.

**WARNING**

Indicates an imminent hazard which, if not avoided, can result in death or serious injury.

**CAUTION**

Indicates hazards which, if not avoided, could result in serious injury and or damage to the equipment.

### GASOLINE / PROPANE POWERED EQUIPMENT

**WARNING**

- Engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

**WARNING**

- Tilting a gasoline powered machine fitted with an EPA approved vented charcoal filter gas cap, beyond 20° can cause fuel leakage. If a leak occurs, do not start or run the engine until the leak is fixed. Eliminate all other ignition sources in the immediate area (no smoking, flares, sparks or flames). Use approved gasoline absorbing material to contain the fuel leakage. Then use clean, non-sparking tools to collect absorbed materials then dispose of these contaminants properly.



- Gasoline is extremely flammable and poisonous. It should only be dispensed in well ventilated areas, and with a cool engine.

- Small gasoline engines produce high concentrations of carbon monoxide (CO) example: a 5 HP 4 cycle engine operation in an enclosed 100,000 cu. ft. area with only one change of air per hour is capable of providing deadly concentrations of CO in less than fifteen minutes. Five changes of air in the same area will produce noxious fumes in less than 30 minutes. Gasoline powered equipment should not be used in enclosed or partially enclosed areas. Symptoms of CO poisoning include, head-ache, nausea, weakness, dizziness, visual problems and loss of consciousness. If symptoms occur - get into fresh air and seek medical attention immediately.

- Never refuel a hot engine or an engine while it is running.
- Engines are shipped from factory without fuel/oil.



- Propane is extremely flammable and is heavier than air and tends to settle in low areas where a spark or flame could ignite gas. DO NOT start or operate this propane engine in a poorly ventilated area where leaking propane gas could accumulate and endanger safety of persons in area. If headache develops, shut off machine. Have it checked for carbon monoxide emissions by a qualified technician before using it again. To ensure personal safety, installation and repair of propane fuel supply systems must be performed only by qualified technicians. Carbon monoxide emissions from this machine are greatly increased due to a dirty combustion air cleaner.

### ELECTRICAL POWERED EQUIPMENT



Extreme care must be taken when operating electric models with water present: Ensure power cord is properly grounded, is attached to a Ground-Fault-Interrupter (GFI) outlet, and is undamaged.

- Check all electrical cables - be sure connections are tight and cable is continuous and in good condition. Be sure cable is correctly rated for both the operating current and voltage of this equipment.
- Improper connection of the equipment grounding conductor can result in a risk of electric shock. Check with qualified electrician or service person if there is any doubt as to whether the outlet is properly grounded. Adhere to all local codes and ordinances.
- NOTE: In the event of a malfunction or breakdown, grounding provides a path of least resistance for the electric current to dissipate. The motor is equipped with a grounded plug and must be connected to an outlet that is properly installed and properly grounded. DO NOT modify the plug provided on the motor. If the plug does not fit the outlet have a qualified electrician install the proper receptacle.

### ELECTRICAL POWERED EQUIPMENT CONTINUED

- Do not disconnect power by pulling cord. To disconnect, grasp the plug, not the cord.
- Unplug power cord at the machine when not in use and before servicing.
- Switch motor OFF before disconnecting power.
- Never use frayed, damaged, taped or under rated extension cords. Electrical shock could result in death or serious injury to the operator and damage to the equipment.
- Assure you are using the proper extension cord length.

### GENERAL INSTRUCTIONS

- Equipment should only be operated by trained personnel in good physical condition and mental health (not fatigued). The operator and maintenance personnel must be physically able to handle the bulk weight and power of this equipment.
- This is a one person tool. Maintain a safe operating distance to other personnel. It is the operators' responsibility to keep other people (workers, pedestrians, bystanders, etc.) away during operation. Block off the work area in all directions with roping, safety netting, etc. Failure to do so may result in others being injured by flying debris or exposing them to harmful dust and noise.
- This equipment is intended for commercial use only.
- For the operator's safety and the safety of others, always keep all guards in place during operation.
- Never let equipment run unattended.



- Personal Protection Equipment and proper safety attire must be worn when operating this machinery. The operator must wear approved safety equipment appropriate for the job such as hard hat and safety shoes when conditions require. Hearing protection **MUST** be used when operational noise levels of this equipment may exceed 85db. Eye protection **MUST** be worn at all times.



Keep body parts, loose clothing and accessories away from moving parts. Failure to do so could result in dismemberment or death.

- Do not modify the machine.
- Stop motor/engine when adjusting or servicing this equipment. Maintain a safe operating distance from flammable materials. Sparks from the cutting-action of this machine can ignite flammable materials or vapors.



### DUST WARNING

**WARNING**

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to cause cancer, birth defects, or other reproductive harm. Materials being removed can be toxic or hazardous. A breathing respirator is required to help protect the operator.

Some examples of these chemicals are:

- Lead from lead-based paints.
- Crystalline silica from bricks, concrete and other masonry products. Your risk of exposure to these chemicals varies depending on how often you do this type of work. To reduce your risk: work in a well ventilated area, use a dust control system, such as an industrial-style vacuum, and wear approved personal safety equipment, such as a dust/particle respirator designed to filter out microscopic particles.
- See more on the importance of dust prevention and silica warnings at: [osha.gov/silica](http://osha.gov/silica)
- More concrete and silica dust suppression training and educational materials available at [edcoinc.com/silica-standards](http://edcoinc.com/silica-standards) or scan the QR code on page 5.
- Written exposure plans are provided at <http://www.edcoinc.com/written-exposure-control-plans/>

# PARTS LIST MANUAL

## MODEL CPM10 10" WALK BEHIND CRETE-PLANERS®

### TABLE OF CONTENTS

<u>Section</u>	<u>Page Number</u>
Safety Information . . . . .	2
How To Order Replacement Parts . . . . .	3
Illustration 1: Main Grouping . . . . .	4, 5
Illustration 2: Rear Fork & Control Linkage Grouping . . . . .	6, 7
Illustration 3: Rubber Seal Grouping . . . . .	9
Illustration 4: Drum Shaft & Bearing Grouping . . . . .	10, 11
Illustration 5: 6-Shaft Cutter Drum Assembly (Standard) . . . . .	12
Illustration 6: 8-Shaft Cutter Drum Assembly (Optional) . . . . .	13
Illustration 7: Optional Water System Kit . . . . .	14
Illustration 8: Optional Bail Assembly . . . . .	15
Illustration 9: Engine & Belt Drive Grouping . . . . .	16, 17
Illustration 10: 60Hz Motor & Belt Drive Grouping . . . . .	18, 19
Illustration 11: Switch Assembly . . . . .	20
Illustration 12: Advanc Controls, Inc. (aci) Brand Reset Starter Assembly . . . . .	21
Wiring Diagram for ACI Starter & Remote Switch . . . . .	22
Wiring Diagram for 60Hz Motor . . . . .	23
Wiring Diagram for Honda Engine . . . . .	24
Decal Sheet 1: P/N 92204 . . . . .	25
Decal Sheet 2: P/N 92206 . . . . .	26
Limited Equipment Warranty of Sale - Terms & Conditions . . . . .	27
STOP - Before Using This Product . . . . .	28

#### HOW TO ORDER REPLACEMENT PARTS

- To insure product safety and reliability, always use genuine EDCO replacement parts when making repairs to the equipment.
- When calling for parts, specify the MODEL and SERIAL number of the machine, which can be found on the NAME PLATE. Keep that information in the space provided. In addition to this information, give part number, description, and quantity as listed on the parts list to your parts representative.
- Please note: Due to improvements and changes in the equipment, the illustrations shown may be different than the actual machine.

#### FILL IN INFORMATION BELOW


Date of Purchase \_\_\_\_\_

Model # \_\_\_\_\_

Serial # \_\_\_\_\_


SKU # \_\_\_\_\_

**ILLUSTRATION 1: MAIN GROUPING**

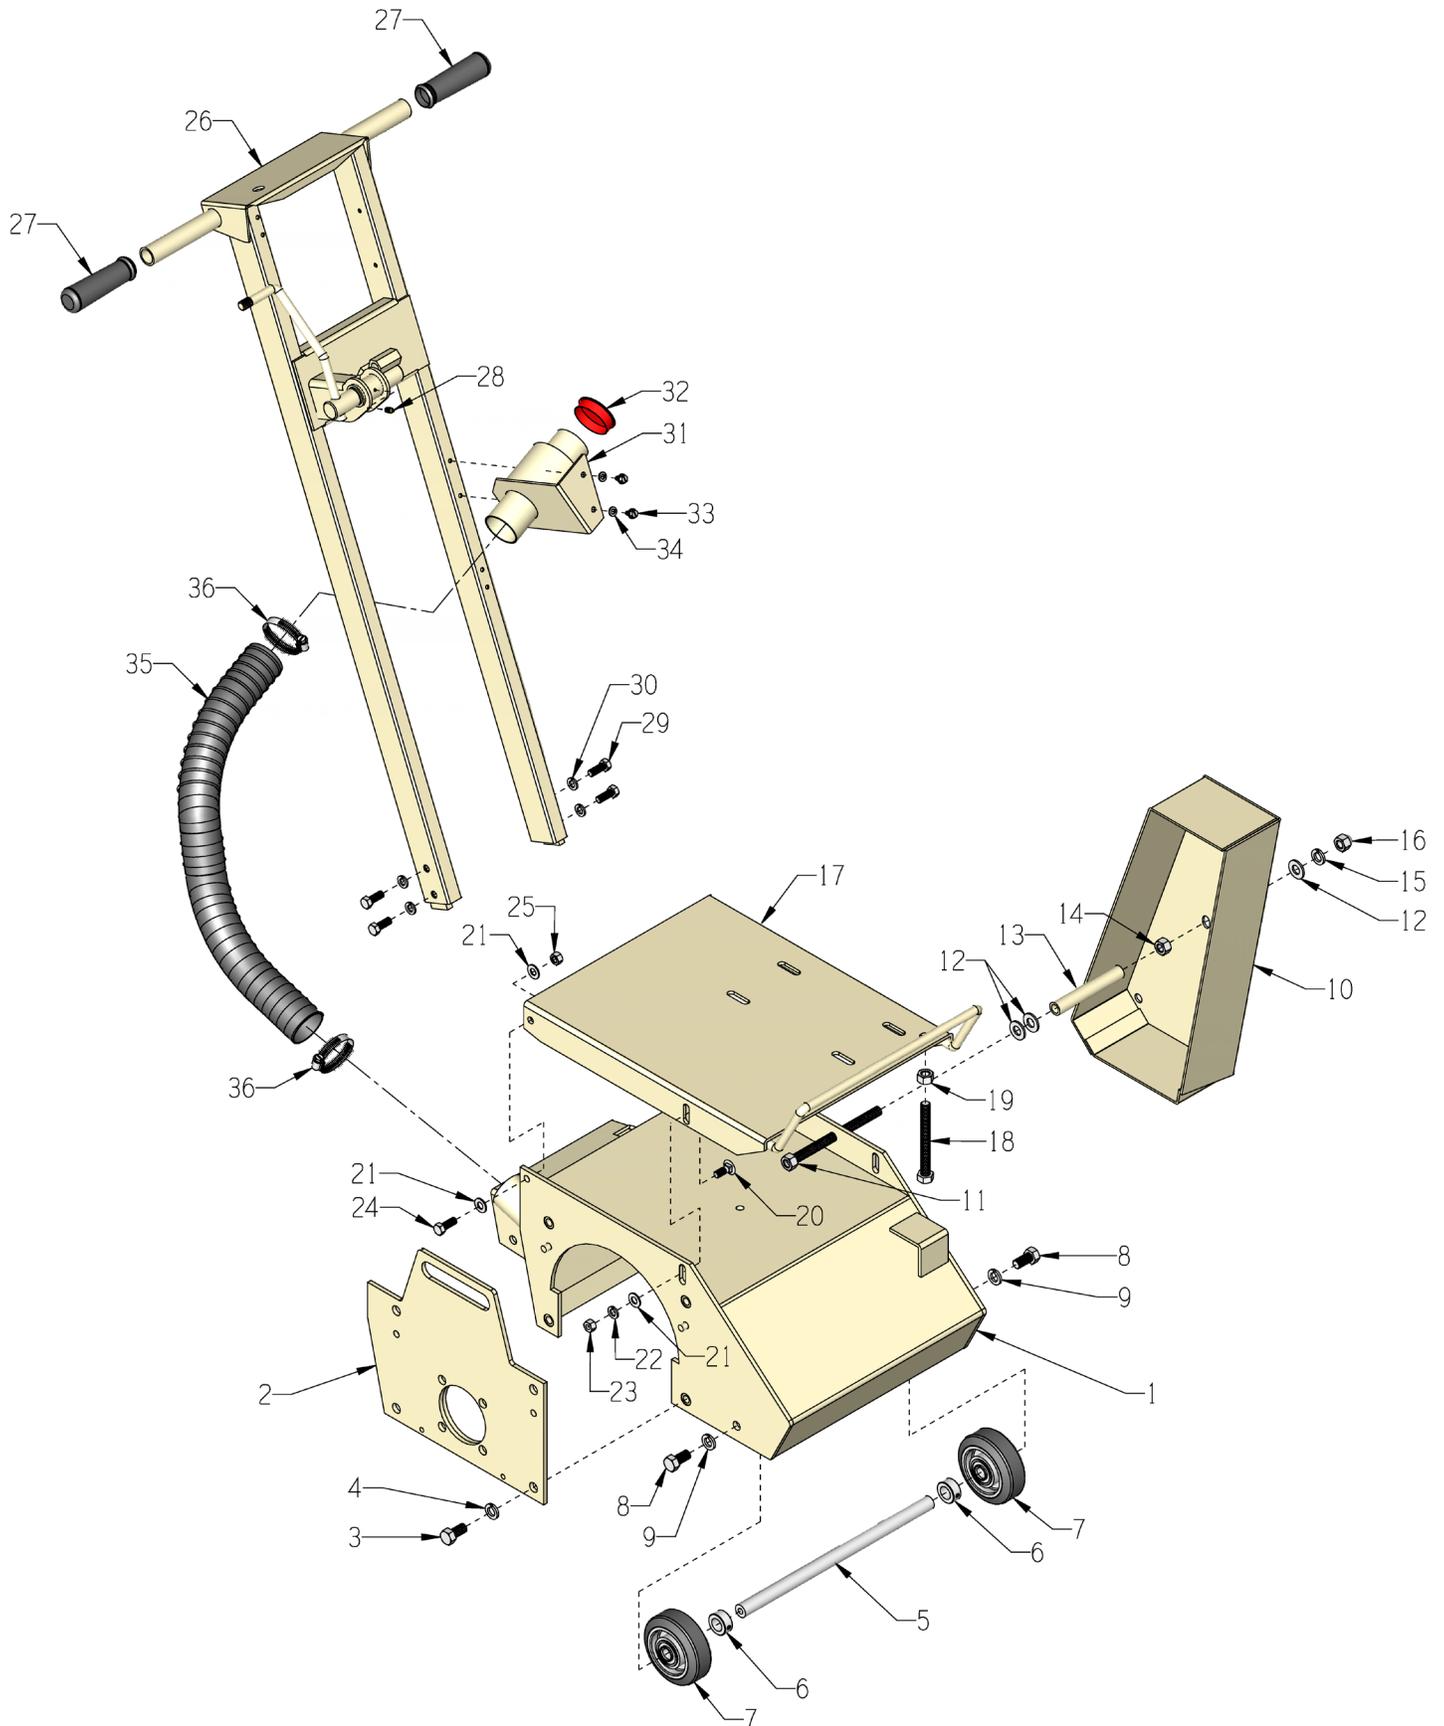

<b>PARTS LISTING - ILLUSTRATION 1: MAIN GROUPING</b>			
<b>ITEM #</b>	<b>PART #</b>	<b>DESCRIPTION</b>	<b>QTY.</b>
1	65201	MAIN FRAME, CPM-10	1
2	65202	PANEL, DRUM SIDE ACCESS, CPM-10	1
3	10304	SCREW, CAP 1/2-20 X 1	4
4	10045	WASHER, LOCK 1/2 ZINC	4
5	65207	AXLE SHAFT, FRONT, CPM-10	1
6	10428	COLLAR, LOCKING 3/4"ID	2
7	52001	WHEEL 4 X 1-1/2 X 3/4"BRG. ALUM/RUB	2
8	10304	SCREW, CAP 1/2-20 X 1	2
9	10045	WASHER, LOCK 1/2 ZINC	2
10	65205	COVER, BELT, CPM-10	1
11	65240	SCREW, CAP 1/2-13 X 6-1/2 GR.8	2
12	10312	WASHER, FLAT 1/2 SAE ZINC	6
13	65206	SPACER, BELT COVER, CPM-10	2
14	10417	NUT, HEX 1/2-13 ZINC	2
15	10045	WASHER, LOCK 1/2 ZINC	2
16	10865	NUT, ACORN 1/2-13	2
17	65203	MOUNT, ENGINE, CPM-10 (SHOWN)	1
	65204	MOUNT, MOTOR, CPM-10	1
18	10392	BOLT, TAP 1/2-13 X 4 (FULL THREAD)	1
19	10417	NUT, HEX 1/2-13 ZINC	1
20	10802	BOLT, CARRIAGE 3/8-16 X 1	2
21	10025	WASHER, FLAT 3/8 SAE ZINC	6
22	10811	WASHER, LOCK 3/8 ZINC	2
23	10404	NUT, HEX 3/8-16 ZINC	2
24	10021	SCREW, CAP 3/8-24 X 1 ZINC	2
25	10004	NUT, HEX LOCK 3/8-24 ZINC	2
26	65210	HANDLE BAR, CPM-10	1
27	10608	GRIP, HAND 1" MODEL AT	2
28	10808	FITTING, GREASE 1/4-28 STRAIGHT	1
29	10055	SCREW, CAP 3/8-16 X 1	4
30	10811	WASHER, LOCK 3/8 ZINC	4
31	86347	BRACKET, MULTI-VAC PORT 2-3"	1
32	65021	CAP/PLUG 2" RED PLASTIC, FLANGED	1
33	10846	SCREW, CAP STSHW 1/4-20 X 5/8	2
34	10038	WASHER, LOCK 1/4 ZINC	2
35	65098	HOSE, FLEX 2"ID X 22"L	1
36	10766	CLAMP, HOSE, SAE #32, ADJ. TO 2-1/2	2


**ILLUSTRATION 2:  
REAR FORK & CONTROL LINKAGE GROUPING**

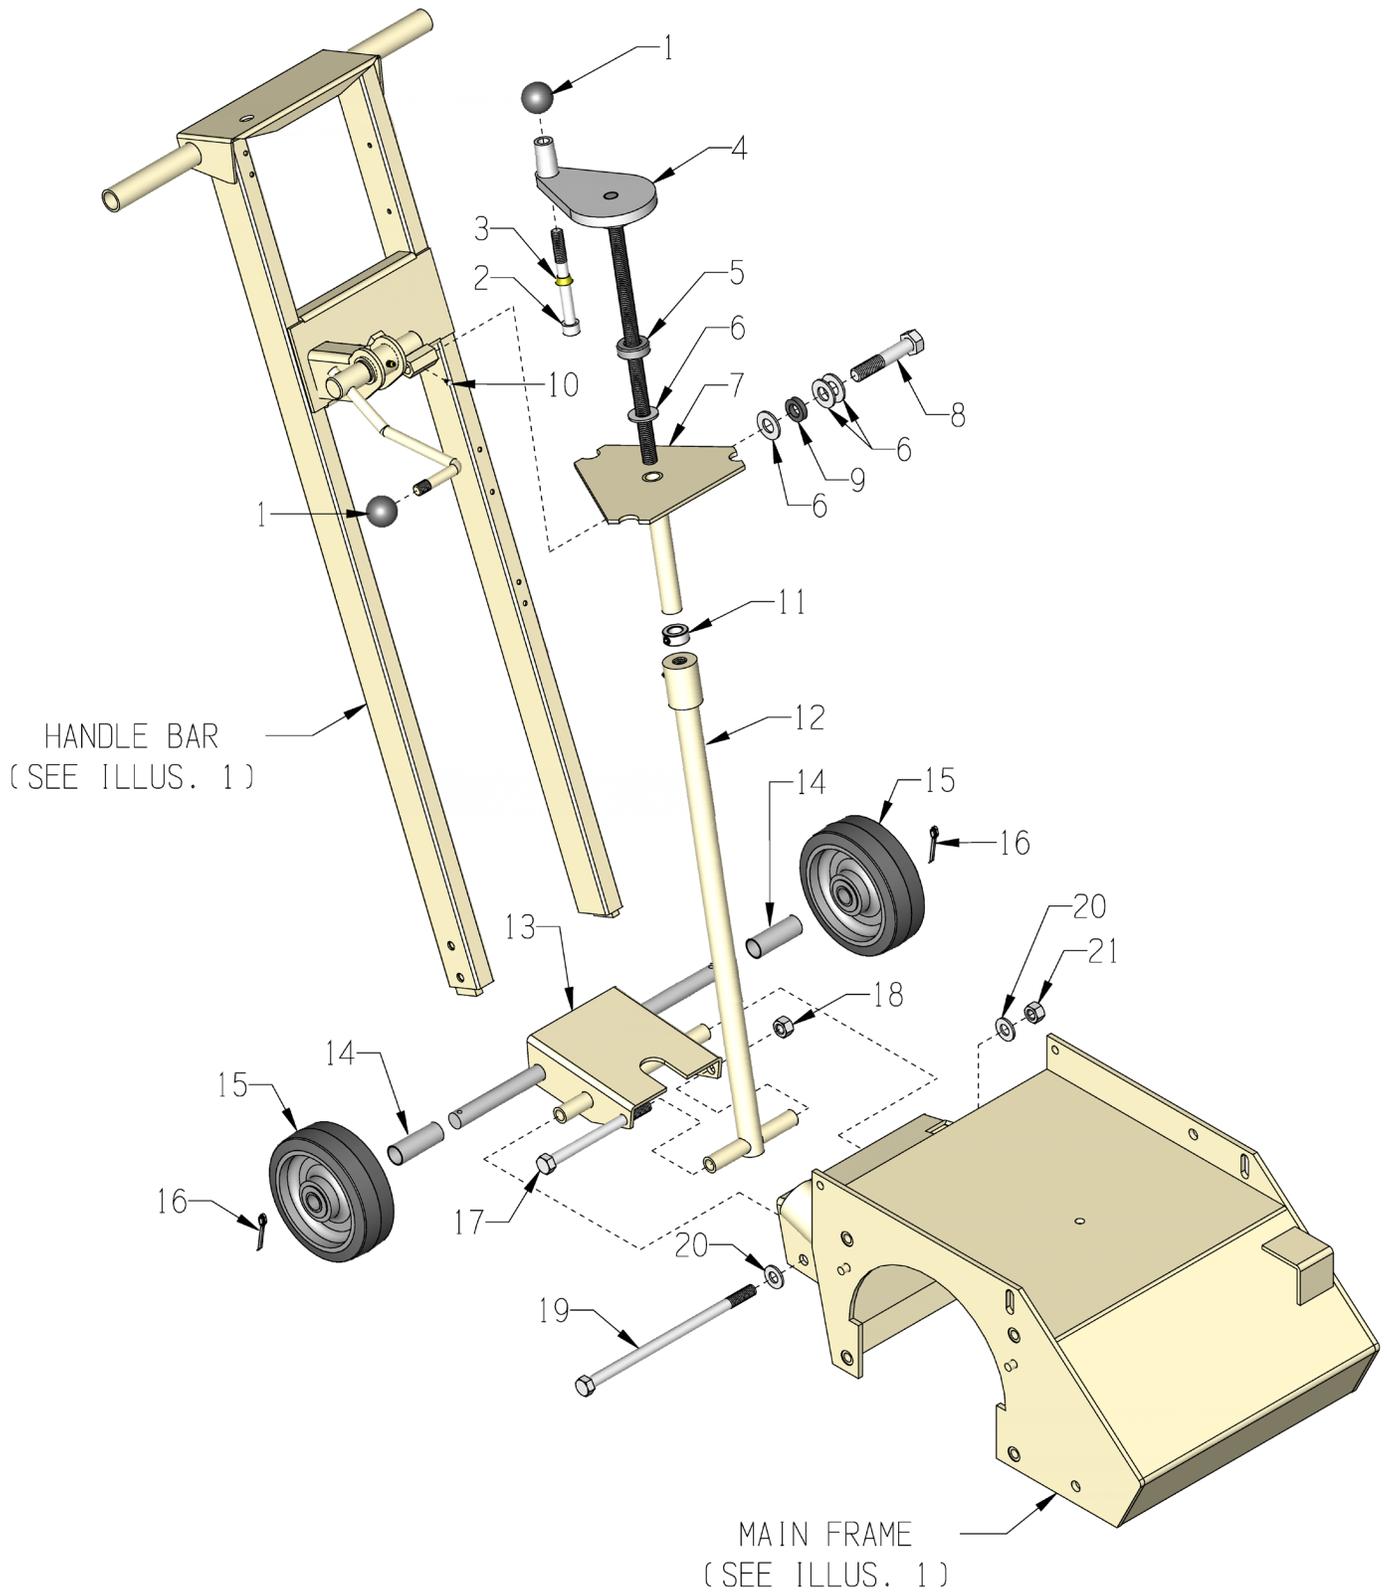

<b>PARTS LISTING - ILLUSTRATION 2: REAR FORK &amp; CONTROL LINKAGE GROUPING</b>			
<b>ITEM #</b>	<b>PART #</b>	<b>DESCRIPTION</b>	<b>QTY.</b>
1	14023	KNOB, BALL 1-3/8 W/ 1/2-13THD, BLK.	2
2	10346	SCREW, SKT. HD. CAP 1/2-13 X 4-1/2	1
3	50550	SLEEVE, BRASS 1/2" TAPERED	1
4	51075	HANDWHEEL, LARGE W/ 5/8-8 X 13"ROD	1
5	85005	BEARING, THRUST BALL 5/8	1
6	10073	WASHER, FLAT 5/8 SAE ZINC	4
7	65214	LINKAGE SUPPORT, HANDWHEEL, CPM-10	1
8	10359	SCREW, CAP 5/8-11 X 3-1/4	1
9	79035	BUSHING, RUBBER 1-1/16 X 5/8 X 1/4	1
10	10127	SCREW, DRIVE 1/8 X 1/4"L	1
11	10096	COLLAR, LOCKING 5/8"ID	1
12	65242	LINKAGE, LOWER, CPM-10	1
13	65208	FORK, CPM-10	1
14	65209	SPACER, REAR WHEEL, 2-1/2", CPM-10	2
15	50030	WHEEL 6 X 2 X 3/4"BRG.,ALUM./RUBBER	2
16	10306	PIN, COTTER 3/16 X 1-1/2	2
17	10329	SCREW, CAP 1/2-20 X 6	1
18	10205	NUT, HEX LOCK 1/2-20 ZINC	1
19	65239	SCREW, CAP 1/2-13 X 10	1
20	10312	WASHER, FLAT 1/2 SAE ZINC	2
21	10407	NUT, HEX LOCK 1/2-13 ZINC	2


THIS PAGE LEFT BLANK INTENTIONALLY

### ILLUSTRATION 3: RUBBER SEAL GROUPING

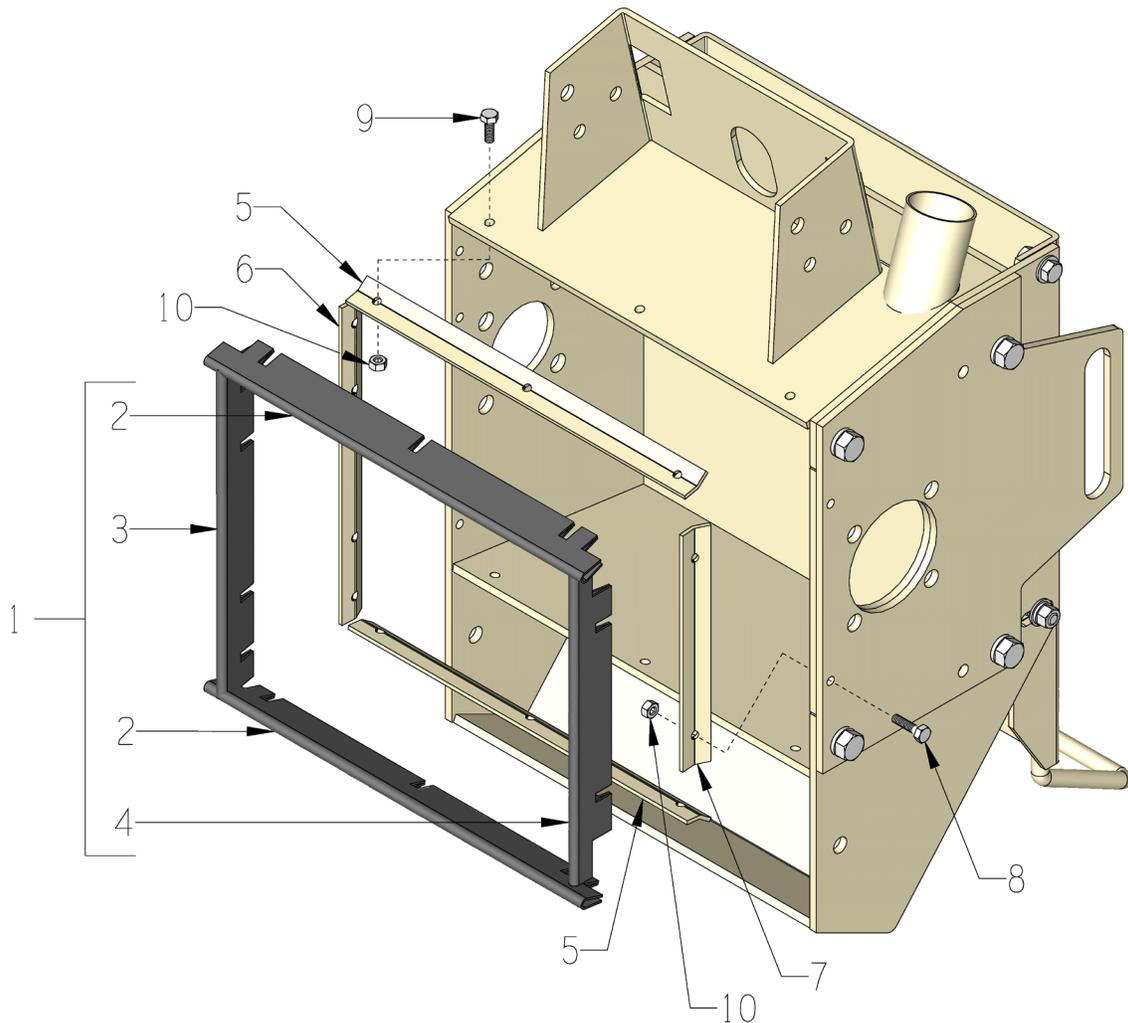

ITEM #	PART #	DESCRIPTION	QTY.
1	65219S	RUBBER SEAL SET, CPM-10 (INCLUDES ITEMS 2, 3, & 4)	1
2	65219-2	RUBBER SEAL, 3 X 14-3/4, CPM-10	2
3	65219-1	RUBBER SEAL, 3 X 11-1/8, CPM-10	1
4	65218	RUBBER SEAL, 3 X 10-3/4, CPM-10	1
5	65222	BRACKET 13-1/4", RUBBER SEAL, CPM10	2
6	65221	BRACKET 10-3/4", RUBBER SEAL, CPM10	1
7	65220	BRACKET 8", RUBBER SEAL, CPM-10	1
8	10031	SCREW, CAP 1/4-20 X 1	2
9	10018	SCREW, CAP 1/4-20 X 3/4	10
10	10861	NUT, KEPS LOCK 1/4-20 ZINC	12


**ILLUSTRATION 4: DRUM SHAFT & BEARING GROUPING**

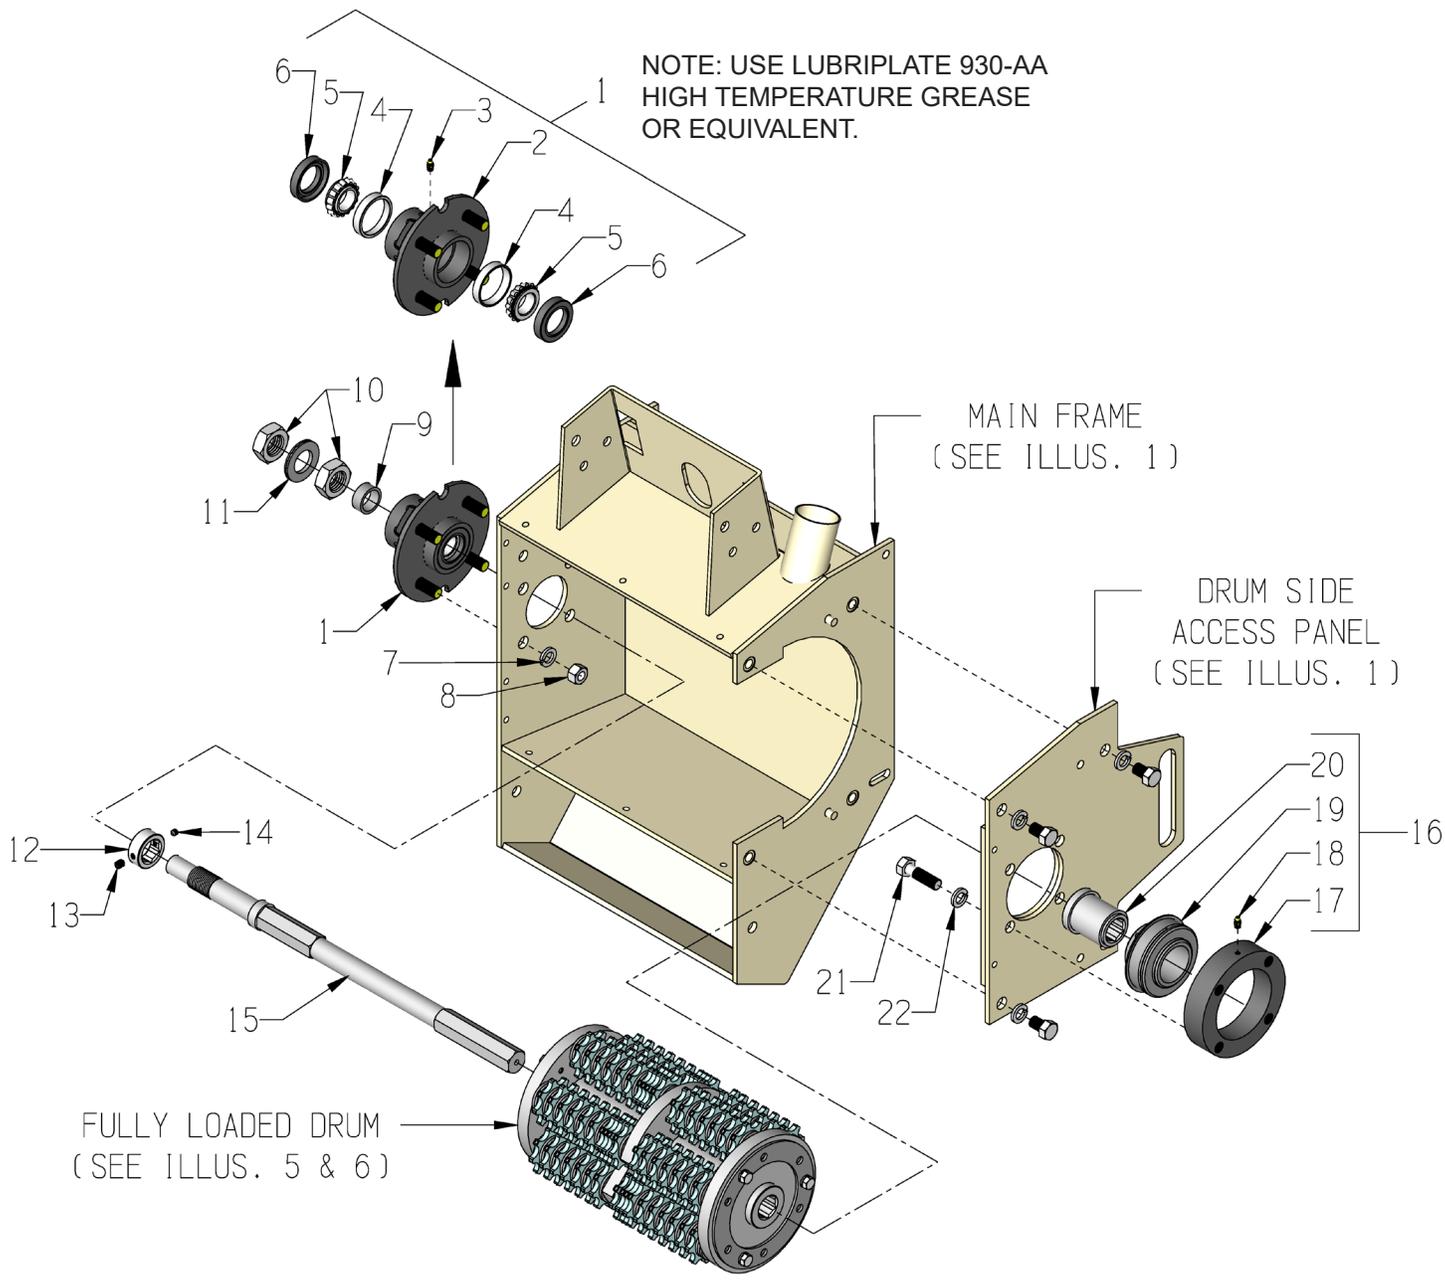

<b>PARTS LISTING - ILLUSTRATIONS 4: DRUM SHAFT &amp; BEARING GROUPING</b>			
ITEM #	PART #	DESCRIPTION	QTY.
1	65227	HUB ASSY. W/ BRGS. & SEALS, CPM-10 (INCLUDES ITEMS 2 THRU 6)	1
2	65227H	HUB ONLY W/ RACES & GREASE HOLE (INCLUDES TWO OF ITEM #4)	1
3	10808	FITTING, GREASE 1/4-28 STRAIGHT	1
4	86339	BEARING CUP L44610 (INCLUDED W/ ITEM #2, PRESS FIT)	2
5	86321	BEARING CONE, TAPERED ROLLER 1"ID	2
6	86322	SEAL, BEARING HUB, 1.25 X 1.983	2
7	10045	WASHER, LOCK 1/2 ZINC	4
8	10072	NUT, HEX 1/2-20 ZINC	4
9	86319	SPACER, HUB BEARING, TG-10 & CPM-10	1
10	50020	NUT, HEX JAM 1-14 ZINC GRADE 8	2
11	86323	WASHER, NORD-LOCK 1" (PAIR)	1
12	65268	COLLAR, LOCKING 1"HEX, CPM-10 (INCLUDES 2 SET-SCREWS - SEE BELOW)	1
13	N/A	SCREW, SET 5/16-18 (INCLUDED W/ ITEM #12)	1
14	10139	SCREW, SET 1/4-20 X 5/16 (INCLUDED W/ ITEM #12)	1
15	65269	SHAFT, DRUM, 1"HEX X 20-3/4"L CPM10	1
16	65224A	BEARING SUBASSY., CPM-10 (INCLUDES ITEMS 17 THRU 20)	1
17	65225	RETAINER, BEARING, CPM-10	1
18	10808	FITTING, GREASE 1/4-28 STRAIGHT	1
19	65224	BEARING, BALL 1-3/4" W/ SNAP RING	1
20	65267	BUSHING, BEARING, 1"HEX, CPM-10	1
21	10498	SCREW, CAP 1/2-20 X 1-3/4	4
22	10045	WASHER, LOCK 1/2 ZINC	4

**ILLUSTRATION 5:  
6-SHAFT CUTTER DRUM ASSEMBLY**

STANDARD

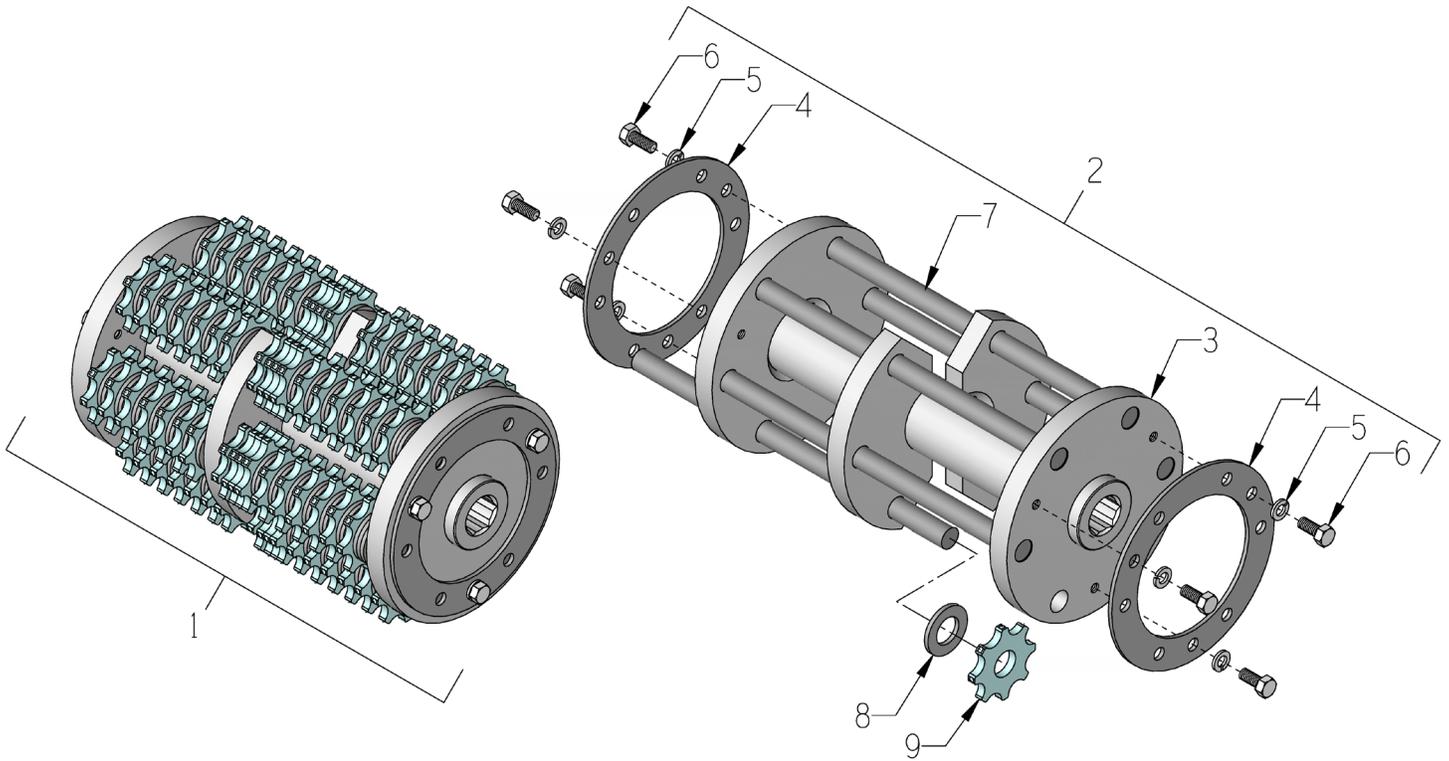


ITEM #	PART #	DESCRIPTION	QTY.
1	65270C	DRUM ASSY. COMP. 6-SHAFT W/ CARBIDE LOADED WITH 102 CP308T CUTTERS & 252 CP403 SPACERS	1
2*	65270	DRUM ASSEMBLY COMPLETE 6-SHAFT 1"HEX (INCLUDES ITEMS 3 THRU 7)	1
3	65271	DRUM ONLY, 6-SHAFT, 1" HEX BORE	1
4	65054	RETAINING PLATE, CUTTER SHAFT	2
5	10801	WASHER, LOCK 5/16 ZINC	6
6	10053	SCREW, CAP 5/16-18 X 3/4	6
7	20170	CP413 SHAFT 5/8 X 11-7/16, CPM-10	6
8*	20060	CP403 SPACER, HARDENED STEEL 1-1/2OD x 3/4ID	SEE NOTE
9*	20326	CUTTERS: CP308T 8-PT. CARBIDE 2-1/4"OD x 3/4"ID x 1/4"THK (SHOWN)	SEE NOTE
	20296	CP404P6 18-PT. POINTED STEEL 2-3/8"OD x 1"ID x 3/16"THK	
	20076	CP404 15-PT. FLAT TIP STEEL 2-3/8"OD x 1"ID x 3/16"THK	

**\*NOTE:**

CUTTER WHEELS AND SPACERS ARE NOT INCLUDED WITH THE DRUM ASSEMBLY. THE NUMBER OF CUTTER WHEELS AND SPACERS VARY WITH TYPE OF SET-UP USED. REFER TO ASSEMBLY PROCEDURS FOR SUGGESTED SET-UPS AND QUANTITIES.

**ILLUSTRATION 6:  
8-SHAFT CUTTER DRUM ASSEMBLY**

OPTIONAL

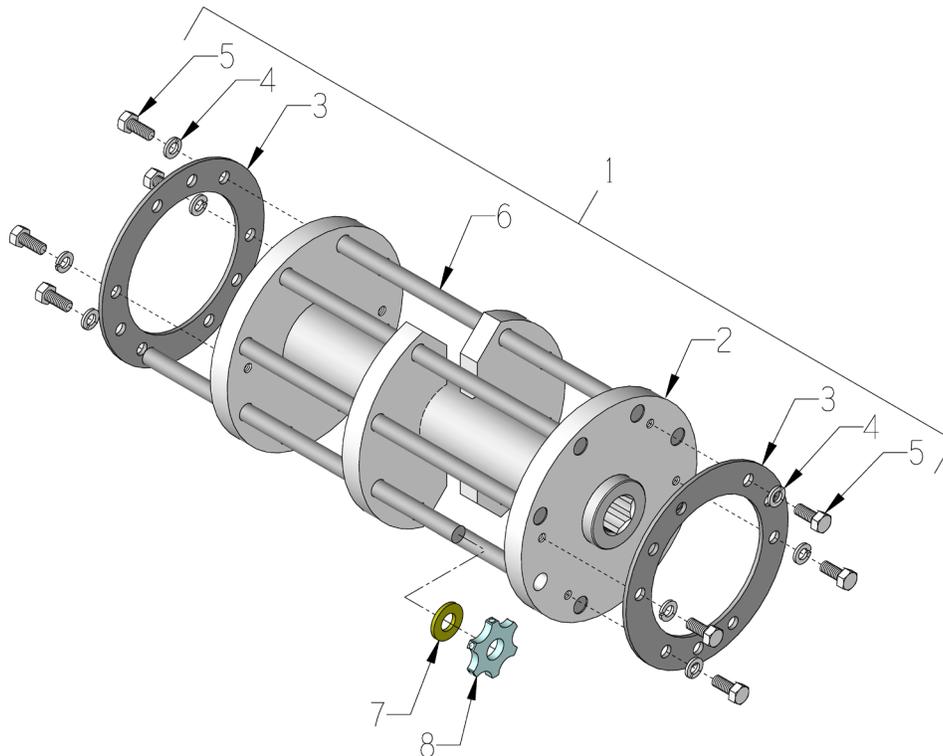


ITEM #	PART #	DESCRIPTION	QTY.
1*	65280	DRUM ASSEMBLY COMPLETE 8-SHAFT 1"HEX (INCLUDES ITEMS 2 THRU 6)	1
2	65281	DRUM ONLY, 8-SHAFT, 1" HEX BORE	1
3	65054	RETAINING PLATE, CUTTER SHAFT	2
4	10801	WASHER, LOCK 5/16 ZINC	8
5	10053	SCREW, CAP 5/16-18 X 3/4	8
6	20180	CP414 SHAFT 1/2 X 11-7/16, CPM-10	8
7*	12230	CG227 SPACER 1/2"ID	SEE NOTE
8*	20156 12206 20206 20336	CUTTERS: CP206T 6-PT. CARBIDE 1-3/4"OD x 5/8"ID x 1/4"THK (SHOWN) JRS501P 18-PT. POINTED STEEL 2"OD x 1/2"ID x 3/16"THK CP305 12-PT. FLAT TIP STEEL 2"OD x 5/8"ID x 3/16"THK CP207T 7-PT. SOLID CARBIDE MILLING 1-1/2"OD x 1/2"ID x 1/2"THK	SEE NOTE

**\*NOTE:**

CUTTER WHEELS AND SPACERS ARE NOT INCLUDED WITH THE DRUM ASSEMBLY.  
THE NUMBER OF CUTTER WHEELS AND SPACERS VARY WITH TYPE OF SET-UP USED.  
REFER TO ASSEMBLY PROCEDURES FOR SUGGESTED SET-UPS AND QUANTITIES.

## ILLUSTRATION 7: OPTIONAL WATER SYSTEM KIT


PART # 65080

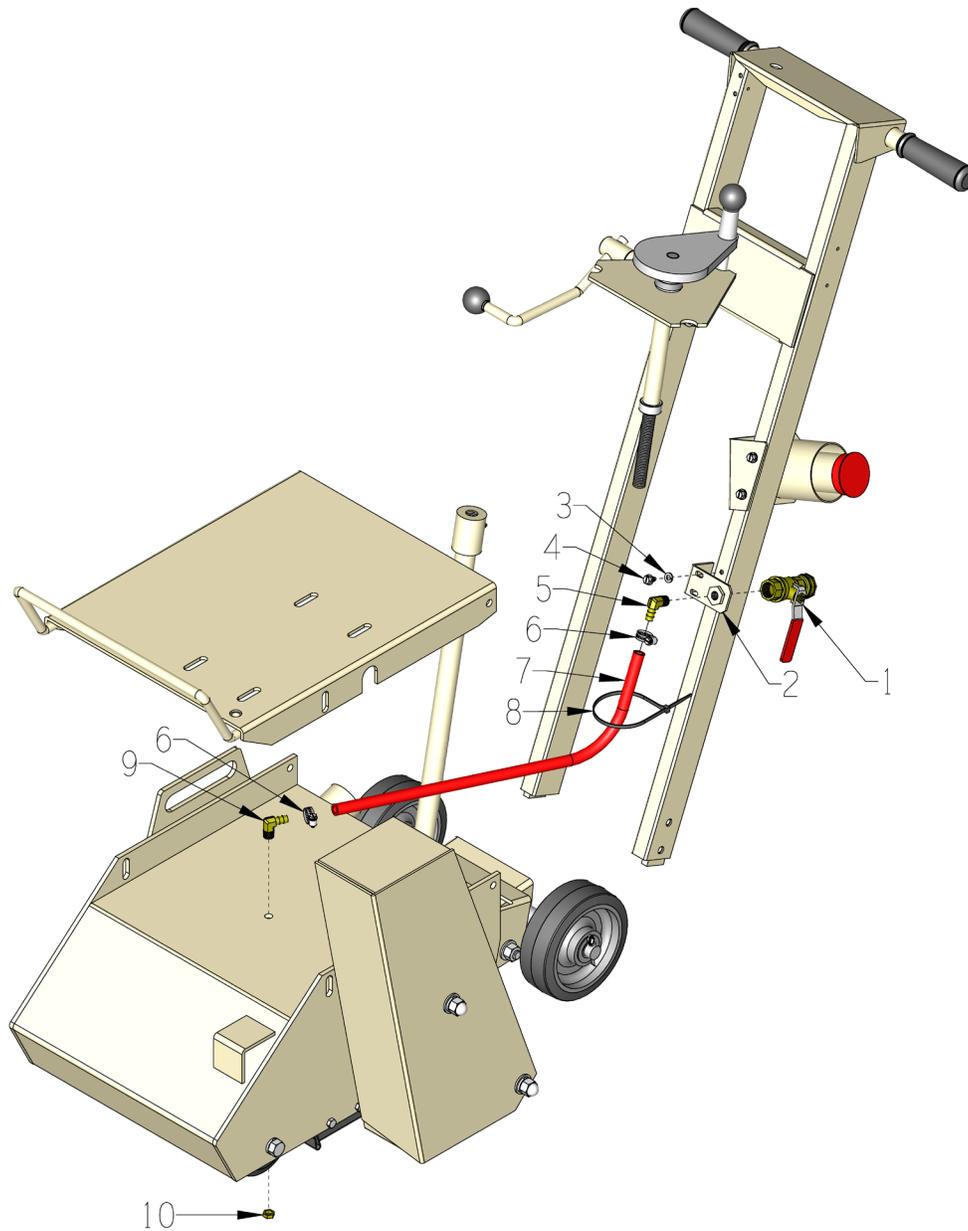

ITEM #	PART #	DESCRIPTION	QTY.
1	10711A	VALVE & HOSE CONNECTOR ASSY.	1
2	56022	BRACKET, WATER VALVE	1
3	10038	WASHER, LOCK 1/4 ZINC	2
4	10846	SCREW, CAP STSHW 1/4-20 X 5/8	2
5	10799	BARB ELBOW 90, 3/8HOSE X 1/4MPT (BRASS)	1
6	50069	CLAMP, HOSE, SAE #6, ADJ. TO 13/16	2
7	65081	HOSE, WATER 3/8"ID X 24"L	1
8	10982	TIE, CABLE, BLACK NYLON 12"	1
9	11562	BARB ELBOW 90, 3/8HOSE X 1/8MPT (BRASS)	1
10	10864	NUT 1/8-27 PIPE THREAD (BRASS)	1


## ILLUSTRATION 8: OPTIONAL LIFTING BAIL ASSEMBLY

PART # 65096A

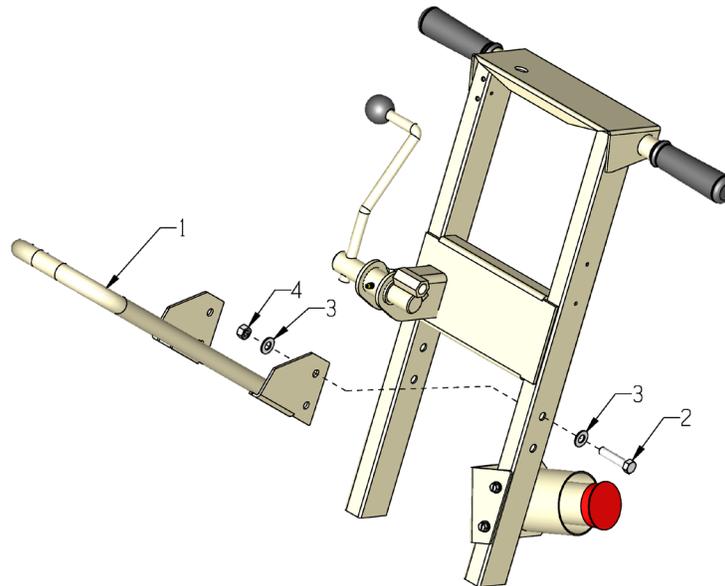


ITEM #	PART #	DESCRIPTION	QTY.
1	65096	BAIL ONLY, LIFTING	1
2	10029	SCREW, CAP 3/8-24 X 1-3/4	4
3	10025	WASHER, FLAT 3/8 SAE ZINC	8
4	10058	NUT, HEX LOCK 3/8-24 W/ NYLON PATCH	4

### INSTRUCTIONS FOR MOUNTING LIFTING BAIL

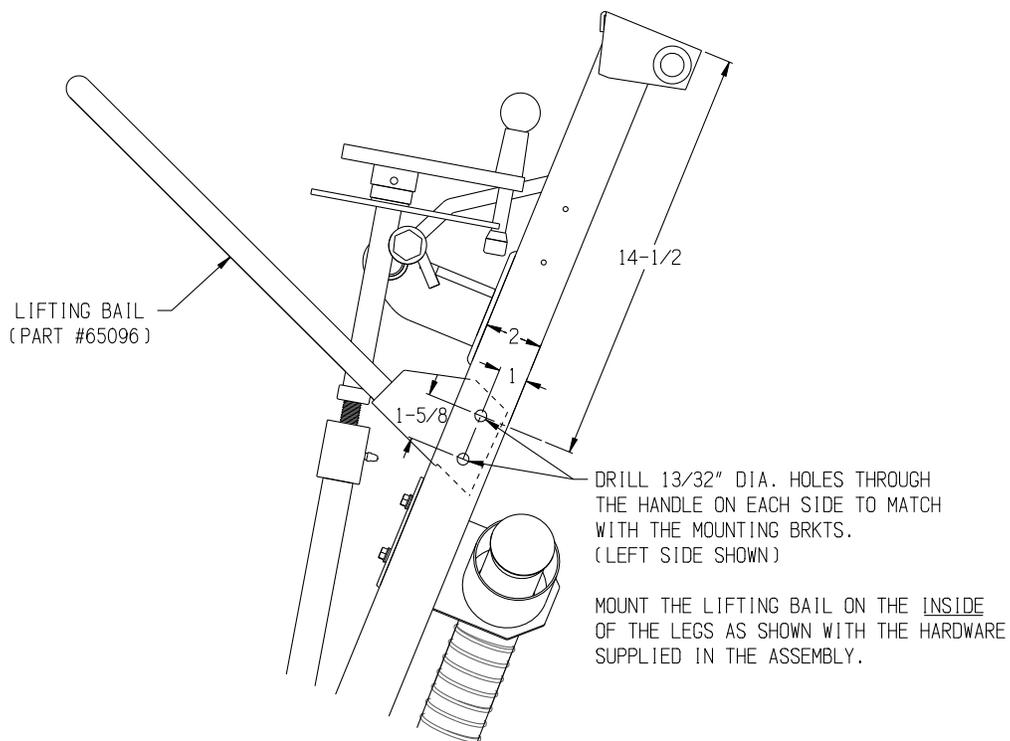


MODEL CPM10-13H

ILLUSTRATION 9: ENGINE & BELT DRIVE GROUPING

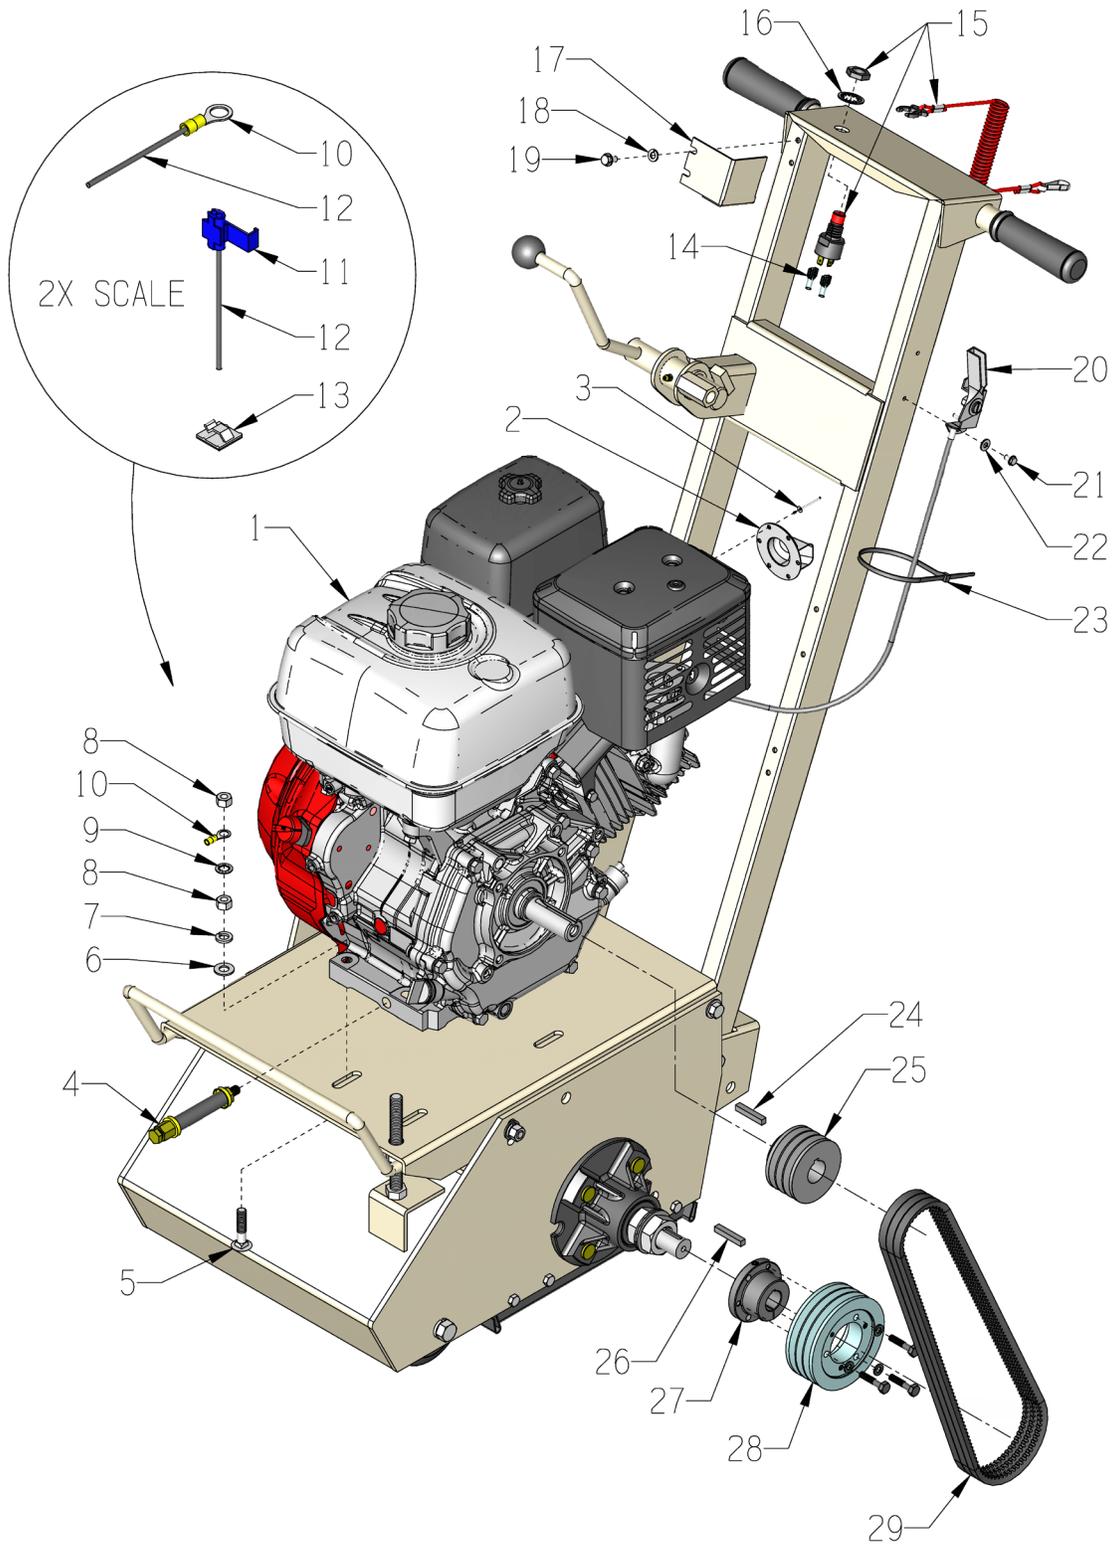

<b>PARTS LISTING - ILLUSTRATION 9: ENGINE &amp; BELT DRIVE GROUPING</b>			
<b>ITEM #</b>	<b>PART #</b>	<b>DESCRIPTION</b>	<b>QTY.</b>
1	15029	ENGINE, HONDA GX390UT2QC9 CYC.AC	1
2	10625	MUFFLER CAP, HONDA #18331-ZE3-811	1
3	10128	RIVET, BLIND 1/8 X .250L X .262HD	2
4	40328	OIL DRAIN KIT, 9/11/13 HP HONDA	1
5	10364	BOLT, CARRIAGE 3/8-16 X 2 GRADE 5	1
	10087	BOLT, CARRIAGE 3/8-16 X 1-3/4	3
6	10025	WASHER, FLAT 3/8 SAE ZINC	4
7	10811	WASHER, LOCK 3/8 ZINC	4
8	10404	NUT, HEX 3/8-16 ZINC	5
9	10453	WASHER, LOCK, INT. TOOTH 3/8"	1
10	10976	TERM., RING 3/8 12-10GA. INSULATED	1
11	10970	CONN., WIRE QUICK-SPLICE 18-14 GA.	1
12	65295	WIRE, 65" BLK 14AWG, CPM10 E-STOP	2
13	36042	ADHESIVE CORD CLIP 5/8"SQ.	2
14	10955	TERM., FEM. PUSH-ON 1/4" 16-14GA.	2
15	65293	SWITCH, SAFETY TETHER E-STOP	1
16	10457	WASHER, LOCK, INT. TOOTH 5/8"	1
17	65294	COVER, E-STOP SWITCH, CPM10	1
18	10038	WASHER, LOCK 1/4 ZINC	2
19	10846	SCREW, CAP STSHW 1/4-20 X 5/8	2
20	40388	CABLE, THROTTLE, LEVER-TYPE 24"	1
21	10877	SCREW, CAP STSHW 10-24 X 1/2	2
22	10831	WASHER, LOCK, INT. TOOTH #10	2
23	10982	TIE, CABLE, BLACK NYLON 12"	1
24	10115	KEY 1/4SQ X 2	1
25	65238	SHEAVE 2.8"OD X 3GR.3V X 1"BORE	1
26	65254	KEY 3/16SQ X 7/8	1
27	10546	BUSHING, SHEAVE SH X 7/8"BORE (INCLUDES HARDWARE)	1
28	65223	SHEAVE 4.12"OD X 3GR.3V X SH	1
29	10258	BELT 3VX-375	3

**ILLUSTRATION 10: 60Hz MOTOR & BELT DRIVE GROUPING**

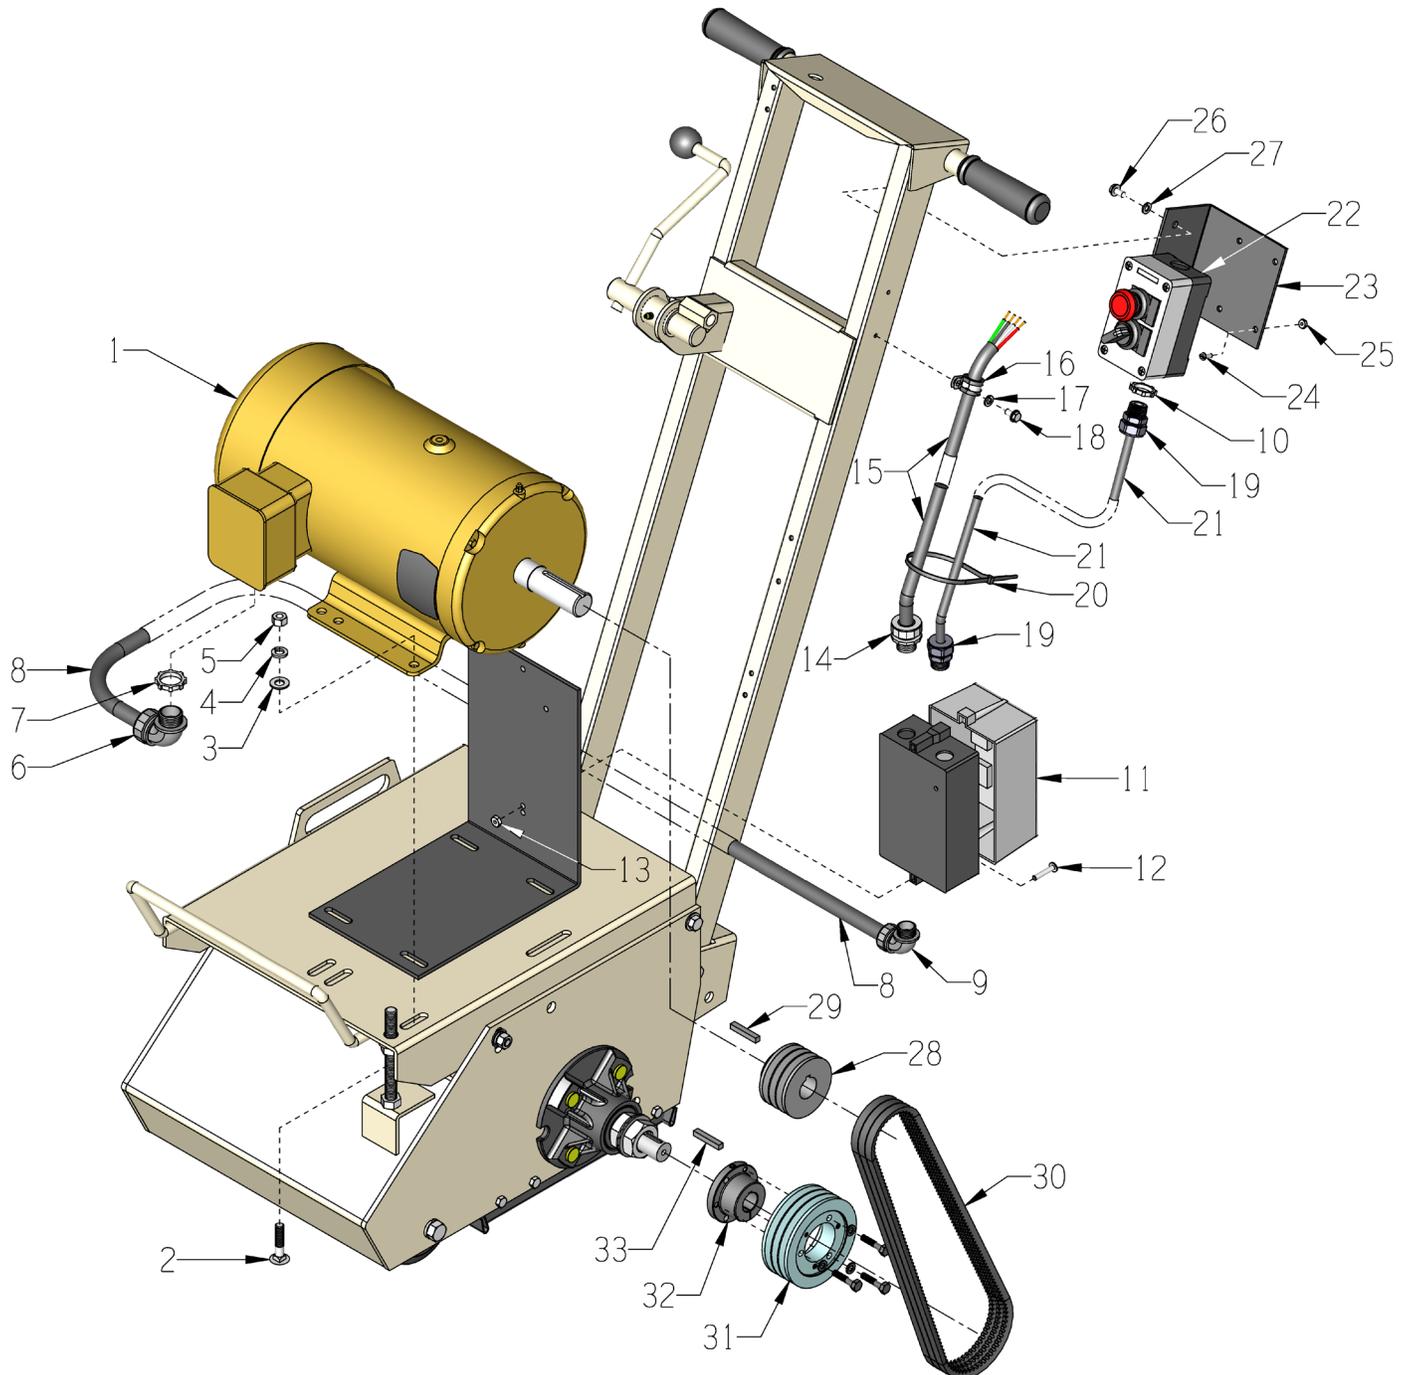


PARTS LISTING - ILLUSTRATION 10: 60Hz MOTOR & BELT DRIVE GROUPING			
ITEM #	PART #	DESCRIPTION	QTY.
1	16002	MOTOR, BALDOR 7.5HP-3P 60HZ 3450RPM	1
2	10804	BOLT, CARRIAGE 3/8-16 X 1-1/2	4
3	10025	WASHER, FLAT 3/8 SAE ZINC	4
4	10801	WASHER, LOCK 5/16 ZINC	4
5	10404	NUT, HEX 3/8-16 ZINC	4
6	16539	STRAIN RELIEF 90D X 3/4NPT .50-.625	1
7	10740	CONDUIT LOCK NUT 3/4 NP (LOCATED INSIDE JUNCTION BOX)	1
8	101228	CORD 10/4 600V X 33"L, CPM10-7.5B	1
9	11621	STRAIN RELIEF 90D X 1/2NPT .625-.75	1
10	10790	CONDUIT LOCK NUT 1/2 NP (LOCATED INSIDE SWITCH BOX)	1
11		STARTER, ACI RESET ONLY (SEE ILLUS. 12 FOR REPLACEMENT PARTS)	
	16454	STARTER ACI #128827, 230V 17.5-21.5A	1
	16459	STARTER ACI #128849, 460V 7.2-10.0A	1
12	11732	SCREW, MACHINE 10-32 X 1-3/4 RPH	2
	10384	SCREW, MACHINE 10-32 X 1 RPH	1
13	10832	NUT, KEPS LOCK 10-32 ZINC	3
14	41053	STRAIN RELIEF 1/2NPT X .625-.750"	1
15	101229	CORD 10/4 600V X 50"L, CPM10-7.5B	1
16	11565	CLAMP, LOOM, 5/8" (SAE SIZE 10)	1
17	10831	WASHER, LOCK, INT. TOOTH #10	1
18	10877	SCREW, CAP STSHW 10-24 X 1/2	1
19	16190	STRAIN RELIEF 1/2NPT X .250-.350"	2
20	10982	TIE, CABLE, BLACK NYLON 12"	3
21	65140	WIRE HARNESS 16/2 X 48"LOA	1
22	16660	SWITCH BOX COMPLETE, ON/OFF/E-STOP (SEE ILLUS. 11 FOR REPLACEMENT PARTS)	1
23	65122	BRACKET, REMOTE SWITCH	1
24	11663	SCREW, MACHINE 8-32 X 1/2 (LOCATED INSIDE SWITCH BOX)	4
25	10462	NUT, KEPS 8-32	4
26	10846	SCREW, CAP STSHW 1/4-20 X 5/8	2
27	10038	WASHER, LOCK 1/4 ZINC	2
28	56314	SHEAVE 2.8"OD X 3GR.3V X 1-1/8"BORE	1
29	N/A	KEY 1/4SQ. X 1-3/4 (INCLUDED W/ MOTOR)	1
30	10269	BELT 3VX-400	3
31	65223	SHEAVE 4.12"OD X 3GR.3V X SH	1
32	10546	BUSHING, SHEAVE SH X 7/8"BORE	1
33	65254	KEY 3/16SQ X 7/8	1

<b>ILLUSTRATION 11: SWITCH ASSEMBLY</b>
---

P/N 16660

## REPLACEMENT PARTS

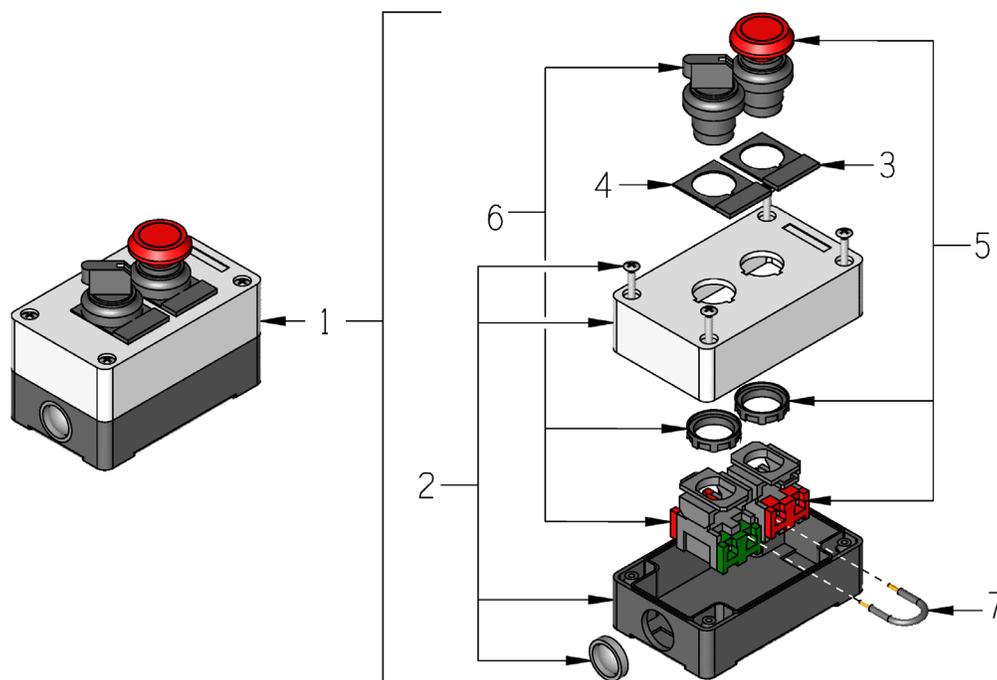


ITEM #	PART #	DESCRIPTION	QTY.
1	16660	SWITCH BOX COMPLETE, ON/OFF/E-STOP (INCLUDES ITEMS 2 THRU 7)	1
2	16661	ENCLOSURE, 2 HOLE ACI PBE2	1
3	16662	LEGEND PLATE, EMER.STOP	1
4	16663	LEGEND PLATE, OFF/ON	1
5	16664	MUSHROOM BUTTON, RED, 1NO+1NC CONT. (INCLUDES CONTACT BLOCK)	1
6	16665	KNOB TYPE SELECTOR SWITCH, BLACK (INCLUDES CONTACT BLOCK)	1
7	16666	WIRE, BLACK JUMPER 14 AWG X 3"	1

## MODELS CPM10-7.5B/230/3 &amp; CPM10-7.5B/460/3

**ILLUSTRATION 12:  
ADVANCE CONTROLS, INC. (aci) BRAND  
RESET STARTER ASSEMBLY**

P/N 16454 &amp; 16459


## REPLACEMENT PARTS

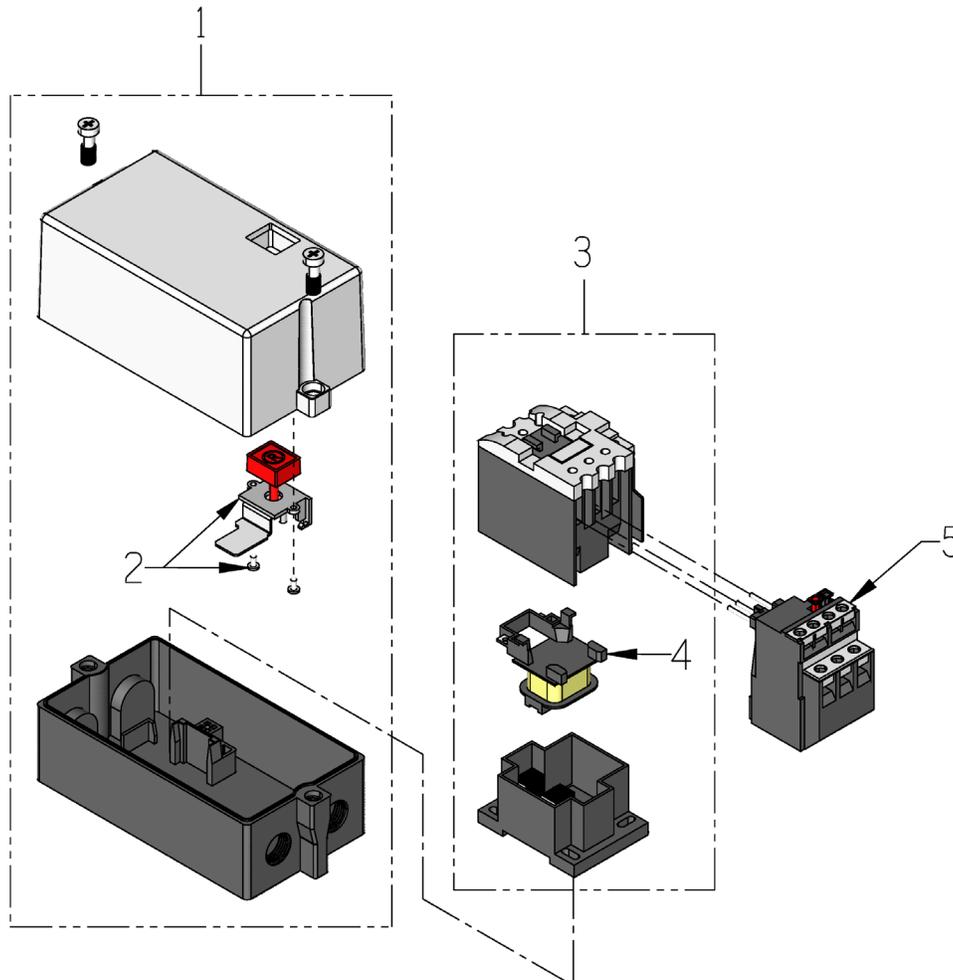

ITEM #	PART #	DESCRIPTION	QTY.
1	16653	STARTER BOX ONLY, RESET (INCLUDES ITEM 2)	1
2	16655	STOP/RESET PUSHBUTTON ASSY., RED	1
3	16617 16618	CONTACTOR WITH COIL (INCLUDES ITEM 4): STARTER CONT./COIL ACI SK18.310-230 (230V) STARTER CONT./COIL ACI SK18.310-460 (460V)	1
4	16622 16623	STARTER AC COIL ONLY: AC COIL 200/240V-60HZ (230V) AC COIL 440/480V-60HZ (460V)	1
5	16637 16633	STARTER OVERLOAD RELAY: O/L RELAY 17.4-21.5 AMP (230V) O/L RELAY 7.2-10.0 AMP (460V)	1

MODELS CPM10-7.5B/230/3 & CPM10-7.5B/460/3

**WIRING DIAGRAM FOR ACI STARTER & REMOTE SWITCH**

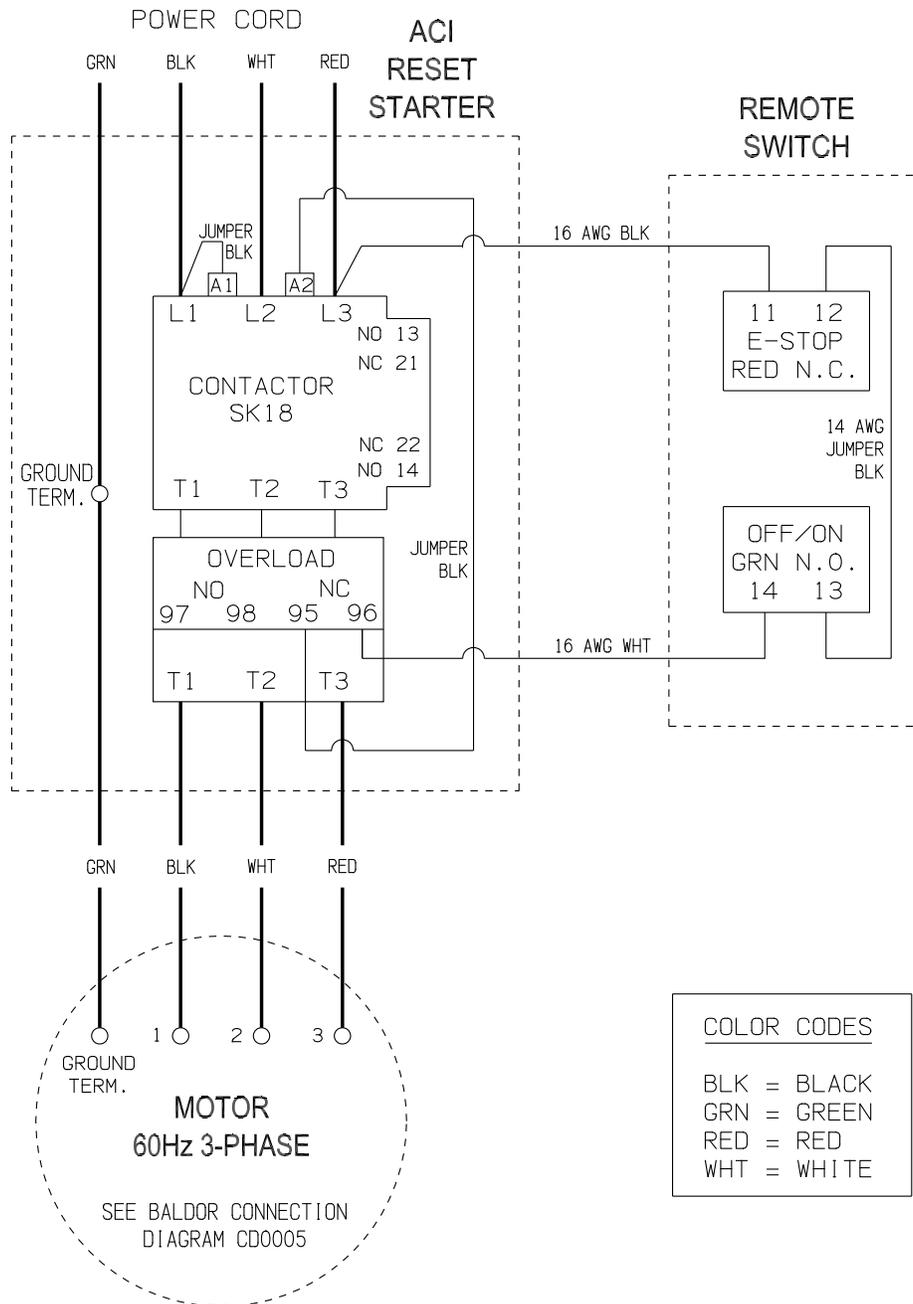


MODELS CPM10-7.5B/230/3 & CPM10-7.5B/460/3


**WIRING DIAGRAM FOR 60Hz MOTOR**

BALDOR CAT. NO. EM3616T  
 7.5 H.P., 3 PHASE, 60 HERTZ, 3450 RPM,  
 230/460 VOLT, 16.8/8.4 FULL LOAD AMPS


CD0005

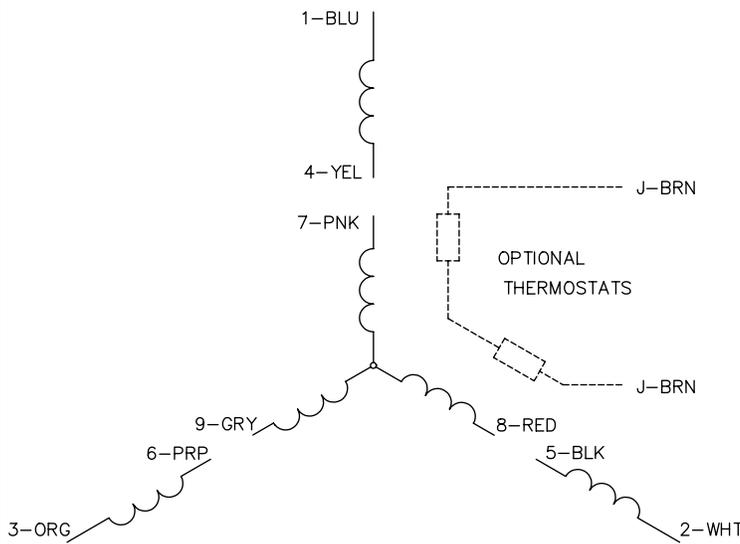

LOW VOLTAGE  
(2Y)

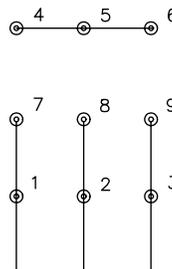

HIGH VOLTAGE  
(1Y)

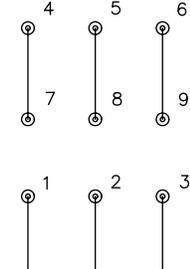

NOTES:

1. INTERCHANGE ANY TWO LINE LEADS TO REVERSE ROTATION.
2. OPTIONAL THERMOSTATS ARE PROVIDED WHEN SPECIFIED.
3. ACTUAL NUMBER OF INTERNAL PARALLEL CIRCUITS MAY BE A MULTIPLE OF THOSE SHOWN ABOVE.
4. LEAD COLORS ARE OPTIONAL. LEADS MUST ALWAYS BE NUMBERED AS SHOWN.

REV. DESC: REVISE TO SHOW OPTIONAL COLORS			
REV. LTR: E	BY: JLP	REVISED: 01/19/99 10:15	TDR: 0171435
900000		FILE: AAA00005140	MDL: -
		MTL: -	


**BALDOR ELECTRIC Co.**

3PH, DV, 9 LEADS

CD0005

MODEL CPM10-13H

**WIRING DIAGRAM FOR HONDA ENGINE**

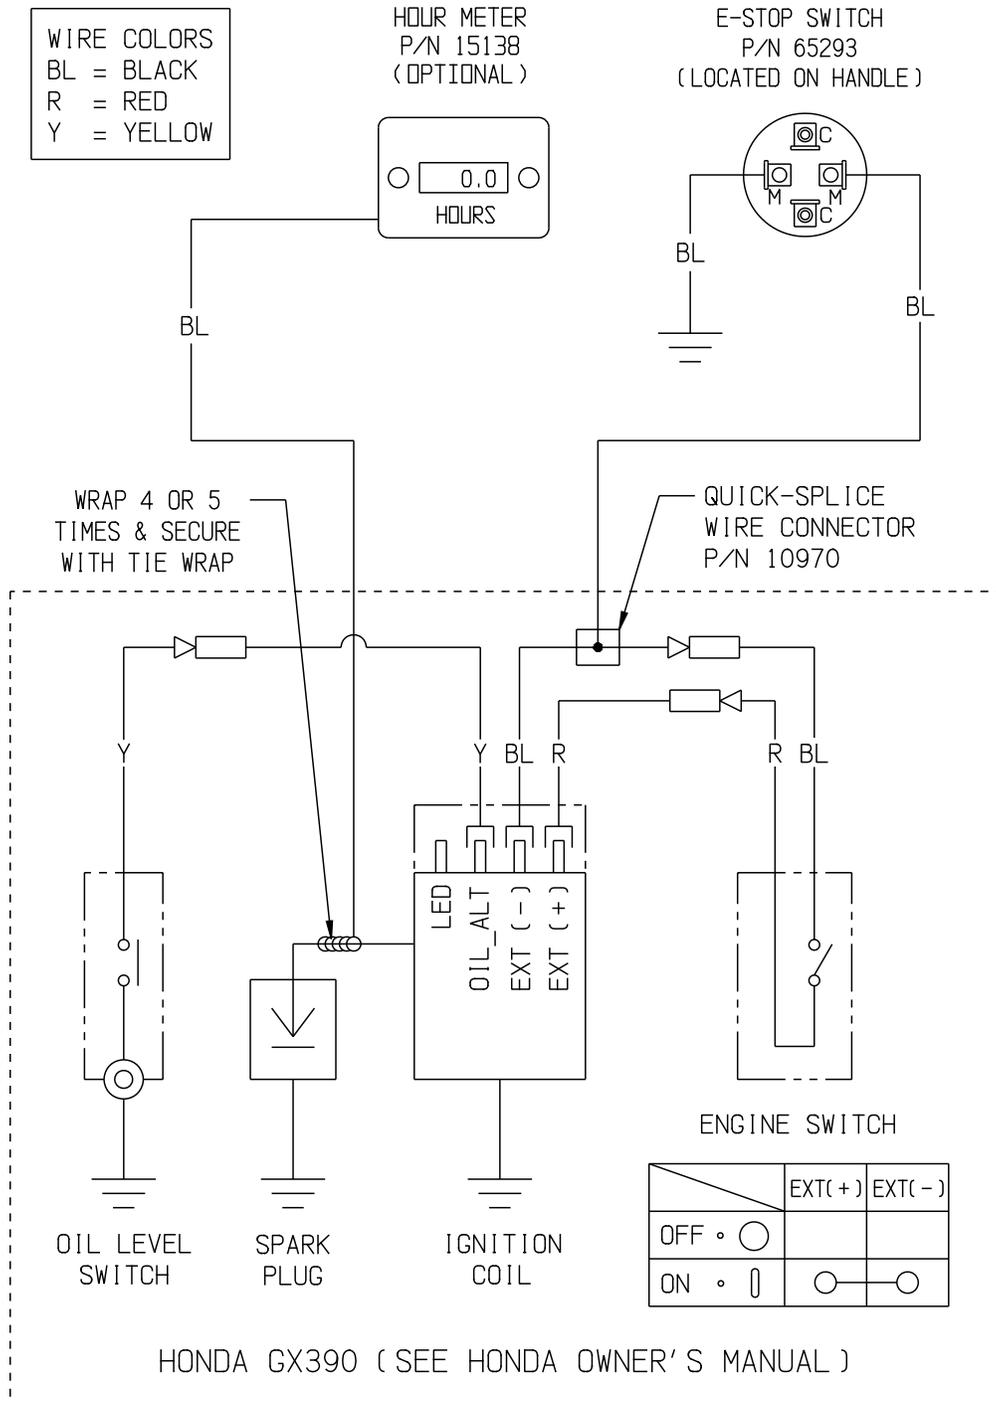

DECAL SHEET 1: P/N 92204


P/N 92204 RevF CPM-4/8/10 & CPL-8 14 x17



WARNING: Cancer and Reproductive Harm. For more information, go to www.P65Warnings.ca.gov



**WARNING**  
THERE IS NO OIL IN THIS MACHINE

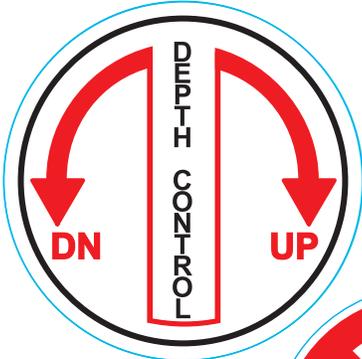


**THROTTLE**

**CHECK OIL DAILY**

**DO NOT USE IMPACT TOOLS TO TIGHTEN LEFT HAND THREADS**

exceeds 85dBA

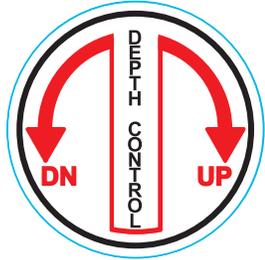

**CAUTION**  
GENERATOR SIZE REQUIREMENT  
RATE GENERATOR AT 3 TIMES MOTOR RATED HORSEPOWER

**RENTAL-TOUGH**




**UK CA**




**CUTTER SHAFT ACCESS**



**GREASE BEARINGS DAILY**

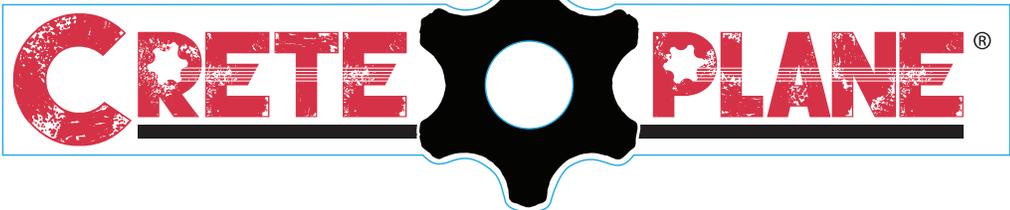

DECAL SHEET 2: P/N 92206

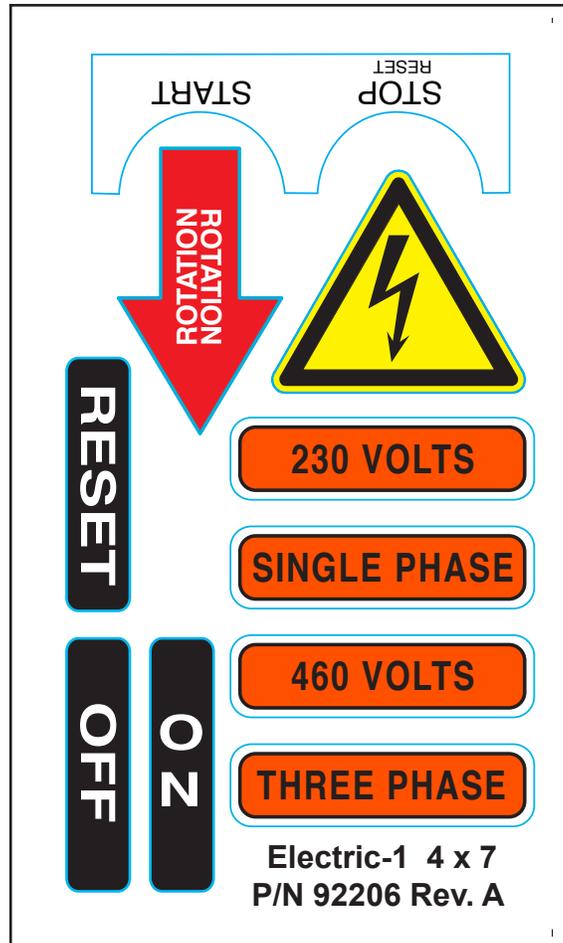

## LIMITED EQUIPMENT WARRANTY OF SALE

Equipment Development Company, Inc. herein referred to as EDCO (Seller) warrants that each new unit manufactured by EDCO to be free from defects in material and workmanship in normal use and service for a period of (1) one year (except for the cutter drum assembly on all model concrete/asphalt planers AND the chisel head assembly on all model ALR's & ALR-BS in which case the warranty period shall be 90 days) from date of shipment to the original retail or equipment rental center owner.

Accessories or equipment furnished and installed on the product by EDCO but manufactured by others, including, but not limited to engines, motors, electrical components, transmissions etc., shall carry the accessory manufacturers own warranty.

EDCO will, at its option, repair or replace, at the EDCO factory or at a point designated by EDCO, any part which shall appear to the satisfaction of EDCO inspection to have been defective in material or workmanship.

EDCO reserves the right to modify, alter and improve any part or parts without incurring any obligation to replace any part or parts previously sold without such modified, altered or improved part or parts.

This warranty is in lieu of and excludes all other warranties, expressed, implied, statutory, or otherwise created under applicable law including, but not limited to the warranty of merchantability and the warranty of fitness for a particular purpose in no event shall seller or the manufacturer of the product be liable for special, incidental, or consequential damages, including loss of profits, whether or not caused by or resulting from the negligence of seller and/or the manufacturer of the product unless specifically provided herein. In addition, this warranty shall not apply to any products or portions thereof which have been subjected to abuse, misuse, improper installation, maintenance, or operation, electrical failure or abnormal conditions and to products which have been tampered with, altered, modified, repaired, reworked by anyone not approved by seller or used in any manner inconsistent with the provisions of the above or any instructions or specifications provided with or for the product.

### TERMS AND CONDITIONS

(NOT APPLICABLE TO SALES THROUGH AUTHORIZED DISTRIBUTION)

#### FORCE MAJEURE

Seller's obligation hereunder are subject to, and Seller shall not be held responsible for, any delay or failure to make delivery of all or any part of the Product due to labor difficulties, fires, casualties, accidents, acts of the elements, acts of God, transportation difficulties, delays by a common carrier, inability to obtain Product, materials or components or qualified labor sufficient to timely perform part of or all of the obligations contained in these terms and conditions, governmental regulations or actions, strikes, damage to or destruction in whole or part of manufacturing plant, riots, terrorist attacks or incidents, civil commotions, warlike conditions, flood, tidal waves, typhoon, hurricane, earthquake, lightning, explosion or any other causes, contingencies or circumstances within or without the United States not subject to the Seller's control which prevent or hinder the manufacture or delivery of the Products or make the fulfillment of these terms and conditions impracticable. In the event of the occurrence of any of the foregoing, at the option of Seller, Seller shall be excused from the performance under these Terms and Conditions, or the performance of the Seller shall be correspondingly extended.

This document sets forth the terms and conditions pursuant to which the purchaser ("Purchaser") will purchase and Equipment Development Co. Inc. ("Seller") will sell the products, accessories, attachments (collectively the Products) ordered by the Purchaser. These terms and conditions shall govern and apply to the sale of Seller's Products to Purchaser, regardless of any terms and conditions appearing on any purchase order or other forms submitted by Purchaser to Seller, or the inconsistency of any terms therein and herein.

#### 1. PRICE

All prices set forth on any purchase order or other document are F.O.B. Seller's facility or distribution point, as may be determined by Seller (F.O.B. Point). All prices are exclusive of any and all taxes, including, but not limited to, excise, sales, use, property or transportation taxes related to the sale or use of the Products, now or hereafter imposed, together with all penalties and expenses. Purchaser shall be responsible for collecting and/or paying any and all such taxes, whether or not they are stated in any invoice for the Products. Unless otherwise specified herein, all prices are exclusive of inland transportation, freight, insurance and other costs and expenses relating to the shipment of the Products from the F.O.B. point to Purchaser's facility. Any prepayment by Seller of freight insurance and other costs shall be for the account of Purchaser and shall be repaid to Seller.

#### 2. PAYMENT TERMS

Payment terms are as follows. 2% 10 days (to approved and qualified accounts). Net 30 days. This is a cash discount for invoices paid within 10 days after the invoice date, regardless of date of receipt of shipment. This is not a trade discount and will not be granted to accounts that do not adhere to stated terms.

\*All past due accounts are subject to a late payment fee of 1.5% per month or a maximum allowed by law if different, along with the expenses incidental to collection including reasonable attorney's fees and costs.

\*Seller reserves the right to hold shipments against past due accounts.

\*Seller reserves the right to alter payment terms.

#### 3. FREIGHT TERMS

All shipments will be made F.O.B. shipping point as designated in these Terms and Conditions, and title shall pass at the F.O.B. point. Delivery to the initial common carrier shall constitute delivery to the Purchaser. Any claims for loss or damage during shipment are to be filed with carrier by the Purchaser. Seller will not assume responsibility for the performance of the carrier.

Back orders will be shipped in the most practical fashion with charges consistent with our freight policy established with the original order. UPS, FED EX, MAIL or shipments by other couriers are subject to the same terms and conditions as outlined in paragraph #3 "Freight Terms".

#### 4. DELIVERY, DAMAGES, SHORTAGES

Seller shall use reasonable efforts to attempt to cause the Products to be delivered as provided for in these Terms & Conditions. Delivery to the initial common carrier shall constitute the delivery to the Purchaser. Seller's responsibility, in so far as transportation risks are concerned ceases upon the delivery of the Products in good condition to such carrier at the F.O.B. point and all the Products shall be shipped at the Purchaser's risk. Seller shall not be responsible or liable for any loss of income and/or profits, or incidental, special, consequential damages resulting from Seller's delayed performance in shipment and delivery.

#### 5. RETURN OF DEFECTIVE PRODUCTS

Defective or failed material shall be held at the Purchaser's premises until authorization has been granted by Seller to return or dispose of Products. Products that are to be returned for final inspection must be returned Freight Prepaid in the most economical way. Credit will be issued for material found to be defective upon Seller's inspection based on prices at time of purchase.

#### 6. PRODUCTS ORDERED IN ERROR

Products may be returned, provided that claim is made and Seller is notified within 7 days of receipt of Products, and the Products are in original buyer's possession not more than 30 days prior to return, subject to Seller's approval. If Products are accepted for return, they must be Freight Prepaid and buyer will be charged a minimum of 15% restocking charge, plus a charge back for outbound freight charges if the original order was shipped prepaid. Returns are not accepted for any Products that are specifically manufactured to meet the buyer's requirement of either specifications or quantity.

#### AGREEMENTS

These Terms and Conditions constitute the entire agreement between Seller and Purchaser as it relates to terms and conditions of sale, and supersedes any and all prior oral or written agreements, correspondence, quotations or understandings heretofore in force between the parties relating to the subject matter hereof. There are no agreements between Seller and Purchaser with respect to the Product herein except those specifically set forth in and made part of these terms and conditions. Any additional terms, conditions and/or prices are rejected by Seller.

These terms and conditions may be modified, cancelled or rescinded only by a written agreement of both parties executed by their duly authorized agents.

### USE ONLY GENUINE EDCO PARTS & ACCESSORIES

**For your own safety, the safety of others and the life of your machine.**

#### SUBMIT ALL WARRANTY CLAIMS AT:

[edcoinc.com/customer-support/warranty-claim-request/](http://edcoinc.com/customer-support/warranty-claim-request/)



## BEFORE USING THIS PRODUCT

Have You Used EDCO's Online Customer Support??



Scan This QRC or Visit  
[www.edcoinc.com/customer-support](http://www.edcoinc.com/customer-support)



**READ:** **EDCO Owner's Manuals and Parts Listings** share basic information and parts of each product. Download and print them whenever needed.



**WATCH:** **EDCO Product Training Videos** show how to use products, install tooling, and perform basic maintenance.



*Example Only*

**FIND:** Somewhere on this product is an **EDCO QRC Training Decal**. Scanning this code provides owner's information, videos, and other training content anywhere/anytime on your mobile device.



**JOIN:** **EDCOed.com** is a free, 24-hour training space. Each certification track focuses on a specific EDCO product group. The information in these tracks help businesses be successful with those products.

EDCO is always updating online training / information so you always have the most recent content.

Also see Operator's Safety & Limited Warranty Manual

Equipment Development Co., Inc. • 800.638.3326 • [techsupport@edcoinc.com](mailto:techsupport@edcoinc.com)