REVISED STARTING SERIAL #161110001



PARTS LIST MANUAL MODELS 2EC-NG & 2GC-NG



ELECTRIC MODEL

GASOLINE MODEL



Magna-Trap™ Dual-Disc Floor Grinders			
SKU#	MODEL#	POWER OPTION	
59200	2EC-NG-1.5	BALDOR ELECTRIC MOTOR 1.5HP 60Hz 1-PHASE 115/230V	
59500	2EC-NG-2B/50	BALDOR ELECTRIC MOTOR 2HP 50Hz 1-PHASE 110/220V	
59600	2EC-NG-3B	BALDOR ELECTRIC MOTOR 3HP 60Hz 1-PHASE 230V	
59300	2GC-NG-11H	HONDA GASOLINE ENGINE MODEL GXV340	





READ AND UNDERSTAND THE OPERATORS INSTRUCTION MANUAL *THOROUGHLY*BEFORE ATTEMPTING TO OPERATE THIS EQUIPMENT.

Death or serious injury could occur if this machine is used improperly.



SAFETY MESSAGES

 Safety Instructions are proceeded by a graphic alert symbol of DANGER, WARNING, or CAUTION.



Indicates an imminent hazard which, if not avoided, will result in death or serious injury.



Indicates an imminent hazard which, if not avoided, can result in death or serious injury.



Indicates hazards which, if not avoided, could result in serious injury and or damage to the equipment.

GASOLINE/PROPANE POWERED EQUIPMENT



 Engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.



- Gasoline is extremely flammable and poisonous. It should only be dispensed in well ventilated areas, and with a cool engine.
- Small gasoline engines produce high concentrations of carbon monoxide (CO) example: a 5 HP 4 cycle engine operation in an enclosed 100,000 cu. ft. area with only one change of air per hour is capable of providing deadly concentrations of CO in less than fifteen minutes. Five changes of air in the same area will produce noxious fumes in less than 30 minutes. Gasoline or propane powered equipment should not be used in enclosed or partially enclosed areas. Symptoms of CO poisoning include, headache, nausea, weakness, dizziness, visual problems and loss of consciousness. If symptoms occur get into fresh air and seek medical attention immediately.

ELECTRICAL POWERED EQUIPMENT



Extreme care must be taken when operating electric models with water present: Ensure power cord is properly grounded, is attached to a Ground-Fault-Interrupter (GFI) outlet, and is undamaged.

- Check all electrical cables be sure connections are tight and cable is continuous and in good condition. Be sure cable is correctly rated for both the operating current and voltage of this equipment.
- Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with qualified electrician or service person if there is any doubt as to whether the outlet is properly grounded. Adhere to <u>all</u> local codes and ordinances.
- NOTE: In the event of a malfunction or breakdown, grounding
 provides a path of least resistance for the electric current to
 dissipate. The motor is equipped with a grounded plug and
 must be connected to an outlet that is properly installed and
 properly grounded. DO NOT modify the plug provided on the
 motor. If the plug does not fit the outlet have a qualified electrician install the proper receptacle.
- · Switch motor OFF before disconnecting power.

- Do not disconnect power by pulling cord. To disconnect, grasp the plug, not the cord.
- Unplug power cord at the machine when not in use and before servicing.

GENERAL INSTRUCTIONS

- Equipment should only be operated by trained personnel in good physical condition and mental health (not fatigued). The operator and maintenance personnel must be physically able to handle the bulk weight and power of this equipment.
- This is a one person tool. Maintain a safe operating distance
 to other personnel. It is the <u>operators' responsibility</u> to keep
 other people (workers, pedestrians, bystanders, etc.) away
 during operation. Block off the work area in all directions with
 roping, safety netting, etc. for a safe distance. Failure to do so
 may result in others being injured by flying debris or exposing
 them to harmful dust and noise.
- This equipment is intended for commercial use only.
- For the operator's safety and the safety of others, always keep all guards in place during operation.
- Never let equipment run unattended.

















 Personal Protection Equipment and proper safety attire must be worn when operating this machinery. The operator must wear approved safety equipment appropriate for the job such as hard hat and safety shoes when conditions require. Hearing protection MUST be used (operational noise levels of this equipment may exceed 85db). Eye protection MUST be worn at all times.



Keep body parts and loose clothing away from moving parts. Failure to do so could result in dismemberment or death.

- · Do not modify the machine.
- Stop motor/engine when adjusting or servicing this equipment.



Maintain a safe operating distance from flammable materials. Sparks from the cutting-action of this machine can ignite flammable materials or vapors.

DUST WARNING



Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to cause cancer, birth defects, or other reproductive harm. Some examples of these chemicals are:

- · Lead from lead-based paints, and
- Crystalline silica from bricks and concrete and other masonry products.

Your risk of exposure to these chemicals varies depending on how often you do this type of work. To reduce your risk: work in a well ventilated area, use a dust control system, such as an industrial-style vacuum, and wear approved personal safety equipment, such as a dust/particle respirator designed to filter out microscopic particles.

EQUIPMENT DEVELOPMENT COMPANY, INC.



Printed in USA

PARTS LIST MANUAL MODELS 2EC-NG & 2GC-NG Magna-Trap™ Dual-Disc Floor Grinders

TABLE OF CONTENTS
<u>Section</u> <u>Pages</u>
Safety Messages and General Instructions
How To Order Replacement Parts
Illustration 1: Frame Grouping
Illustration 2: Locking Lever Grouping
Illustration 3: Skirt, Vacuum Port & Water Hook-Up Grouping 8, 9
Illustration 4: Gear Case Grouping10, 11
Illustration 5: 10" Magna-Trap™ Disc Assembly
Illustration 6: Optional Diamond Disc Adapter
Illustration 7: Motor & Belt Drive Grouping for 1.5 HP 60Hz Units 14, 15
Illustration 8: Motor & Belt Drive Grouping for 2 HP 50Hz Units
Illustration 9: Motor & Belt Drive Grouping for 3 HP 60Hz Units
Illustration 10: Engine & Belt Drive Grouping for Honda GXV340 20, 21
Wiring Diagram for Rotary Cam Switch
Wiring Diagram for ACI Starter
Wiring Diagram for Baldor L3514TM Motor (Model 2EC-NG-1.5) 24
Wiring Diagram for Baldor L3605T-50 Motor (Model 2EC-NG-2B/50) 25
Wiring Diagram for Baldor L3609TM Motor (Model 2EC-NG-3B)
Wiring Diagram for Honda GXV340
Decal Sheets
Blank Page
Notes 31
Limited Equipment Warranty of Sale - Terms & Conditions

HOW TO ORDER REPLACEMENT PARTS

- ☐ To insure product safety and reliability, always use genuine EDCO replacement parts when making repairs to the equipment.
- □ When calling for parts, specify the MODEL and SERIAL number of the machine, which can be found on the NAME PLATE. Keep that information in the space provided. In addition to this information, give part number, description, and quantity as listed on the parts list to your parts representative.
- Please note: Due to improvements and changes in the equipment, the illustrations shown may be different than the actual machine.


FILL IN INFORMATION BELOW

Date of F	ourchase _		
Model #			
Serial #		 	

SKU # _____



ILLUSTRATION 1: FRAME GROUPING

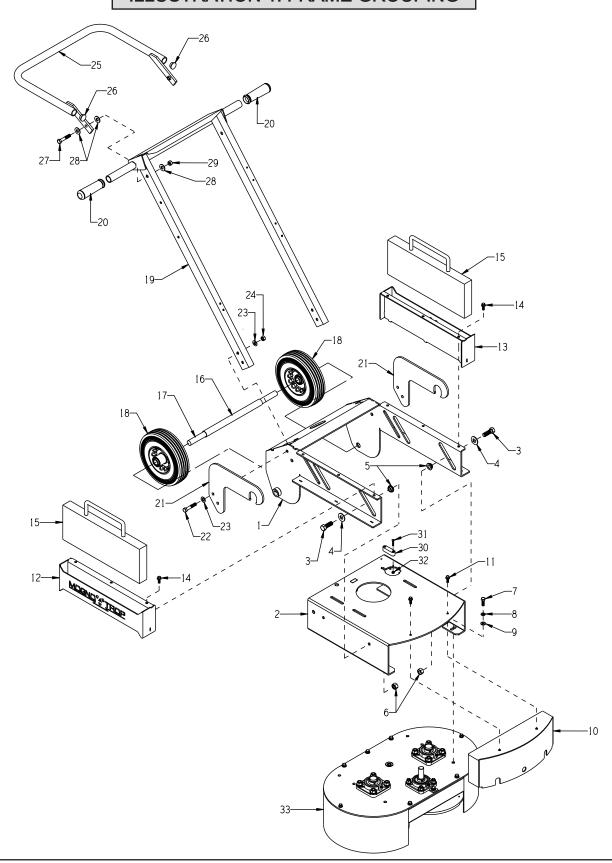

EQUIPMENT DEVELOPMENT COMPANY, INC.100 Thomas Johnson Drive, Frederick, MD 21702-4600 USA



	PARTS LIST	TING - ILLUSTRATION 1: FRAME GROUPING	
ITEM#	PART#	DESCRIPTION	QTY.
1	77601	OUTER FRAME	1
2	77602	ENGINE/MOTOR DECK	1
3	10308	SCREW, CAP 1/2-20 X 1-1/2	4
4	77623	WASHER, FLAT 1/2" SILICON BRONZE	4
5	77622M	FLANGED-SLEEVE, BRONZE (MODIFIED)	4
6	10154	NUT, HEX NYLON LOCK 1/2-20 ZINC	4
7	10806	SCREW, CAP 5/16-18 X 1	6
8	10801	WASHER, LOCK 5/16 ZINC	6
9	10213	WASHER, FLAT 5/16 SAE ZINC	6
10	77603	HOOD	1
11	11811	BOLT, FLANGE 1/4-20 X 3/4 ZINC	2
12	77617R	HOLDER RH, SIDE WEIGHT BLOCK	1
13	77617L	HOLDER LH, SIDE WEIGHT BLOCK	1
14	11811	BOLT, FLANGE 1/4-20 X 3/4 ZINC	6
15	77506	WEIGHT BLOCK, 40 LB. (OPTIONAL)	2
16	77605	SPACER 11-1/4", WHEEL	1
17	77606	AXLE SHAFT 3/4 X 17-1/2	1
18	79013SH	WHEEL, STL.HUB 8 X 2-1/2 X 3/4"BRG.	2
19	77607	HANDLE BAR	1
20	10608	GRIP, HAND 1" MODEL AT	2
21	77632	LIFTING HOOK BRACKET, 2ECGC-NG	2
22	10030	SCREW, CAP 3/8-24 X 2	4
23	10025	WASHER, FLAT 3/8 SAE ZINC	8
24	10004	NUT, HEX LOCK 3/8-24 ZINC	4
25	77624	HANDLE EXTENSION	1
26	77528	PLUG, BLACK 1"RD. TUBING 10-14 GA.	2
27	10336	SCREW, CAP 3/8-24 X 2-1/4	2
28	10025	WASHER, FLAT 3/8 SAE ZINC	6
29	10152	NUT, HEX NYLON LOCK 3/8-24 ZINC	2
30	59117	LEVEL, SCREW ON	1
31	11871	SCREW, MACHINE FHP 8-32 X 1-1/4	2
32	10462	NUT, KEPS LOCK 8-32 ZINC	2
33		GEAR CASE ASSEMBLY (REFER TO ILLUS. 4 FOR BREAKDOWN)	1




Printed in USA

JWA ©2016

Page 5

ILLUSTRATION 2: LOCKING LEVER GROUPING

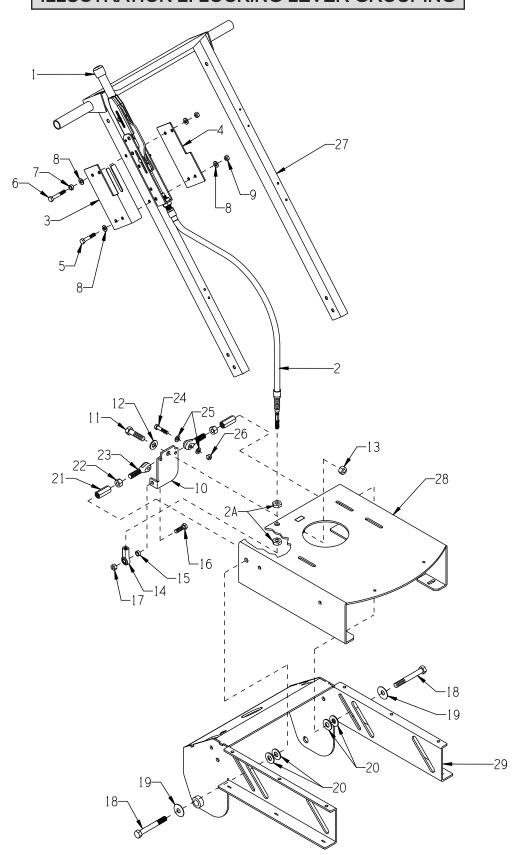


EQUIPMENT DEVELOPMENT COMPANY, INC.100 Thomas Johnson Drive, Frederick, MD 21702-4600 USA



PARTS LISTING - ILLUSTRATION 2: LOCKING LEVER GROUPING			
ITEM#	PART#	DESCRIPTION	QTY.
1	77620	LEVER, LOCKING	1
2	77621	CABLE, LOCKING LEVER	1
2A		JAM NUT (INCLUDED W/ CABLE, ITEM 2)	2
3	77609	BRACKET 2, LOCKING LEVER	1
4	77608	BRACKET 1, LOCKING LEVER	1
5	10204	SCREW, CAP 5/16-18 X 1-3/4	3
6	10380	SCREW, CAP 5/16-18 X 2	1
7	10113	SPACER, STEEL 9/16OD X 3/8ID X 7/32	1
8	10213	WASHER, FLAT 5/16 SAE ZINC	8
9	10151	NUT, HEX NYLON LOCK 5/16-18 ZINC	4
10	77610	PIVOT BRACKET, LOCKING LEVER	1
11	10308	SCREW, CAP 1/2-20 X 1-1/2	1
12	10312	WASHER, FLAT 1/2 SAE ZINC	1
13	10072	NUT, HEX 1/2-20 ZINC	1
14	10919	ROD END, FEMALE 3/8-24 R.H. THREAD	1
15	10113	SPACER, STEEL 9/16OD X 3/8ID X 7/32	1
16	10309	SCREW, CAP 3/8-24 X 1-1/4 ZINC	1
17	10151	NUT, HEX NYLON LOCK 5/16-18 ZINC	2
18	10339	SCREW, CAP 1/2-20 X 4	2
19	10433	WASHER, BELLEVILLE 1/2ID X 3/32THK	2
20	77623	WASHER, FLAT 1/2" SILICON BRONZE	4
21	77634	ROD COUPLING 1/2-20 X 1-3/4 ZINC	2
22	10072	NUT, HEX 1/2-20 ZINC	2
23	77633	CLEVIS ROD END, MALE SHANK 1/2-20	2
24	10606	SCREW, CAP 5/16-18 X 1-1/4	2
25	10213	WASHER, FLAT 5/16 SAE ZINC	4
26	10151	NUT, HEX NYLON LOCK 5/16-18 ZINC	2
27	77607	HANDLE BAR (REFER TO ILLUS. 1, ITEM 19)	1
28	77602	ENGINE/MOTOR DECK (REFER TO ILLUS. 1, ITEM 2)	1
29	77601	FRAME, OUTER (REFER TO ILLUS. 1, ITEM 1)	1



ILLUSTRATION 3: SKIRT, VACUUM PORT & WATER HOOK-UP GROUPING

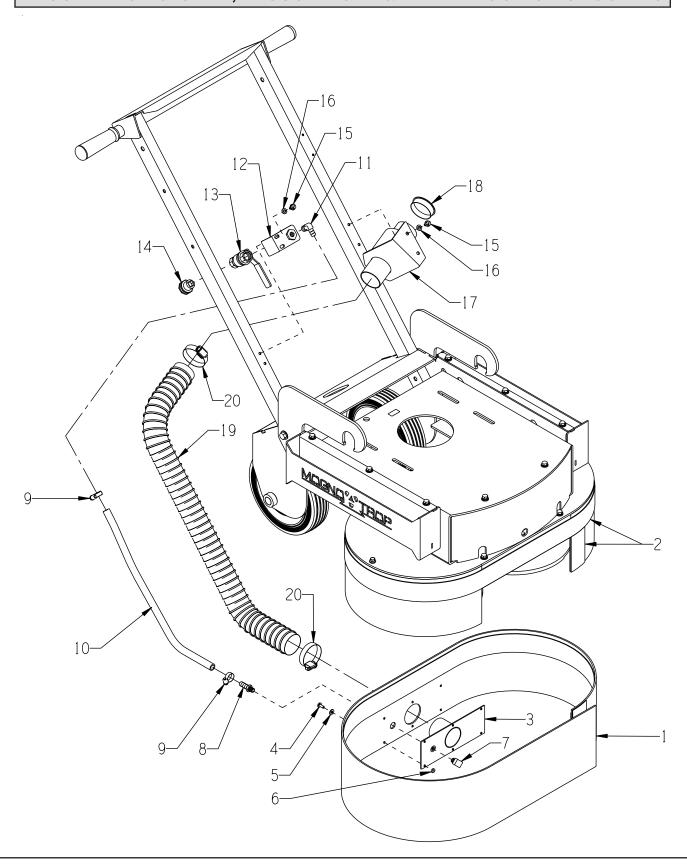



		PARTS LISTING - ILLUSTRATION 3: CUUM PORT & WATER HOOK-UP GROUPING	
ITEM#	PART#	DESCRIPTION	QTY.
1	77615	RUBBER SKIRT ONLY	1
2	77619	VELCRO-HOOK ONLY 2" X 84" (TRIMMED TO SIZE)	1
3	77614	VACUUM PORT PANEL	1
4	10830	SCREW, MACHINE PPH 10-32 X 1/2	6
5	10850	WASHER, FLAT #10 SAE ZINC	6
6	10832	NUT, KEPS LOCK 10-32 ZINC	6
7	10772	ELBOW, STREET 1/8NPT X 45 (BRASS)	1
8	10694	BARB, 3/8HOSE X 1/8MPT	1
9	50069	CLAMP, HOSE, SAE #6, ADJ. TO 13/16	2
10	56315	HOSE, WATER 3/8"ID X 24"L	1
11	10799	BARB ELBOW 90, 3/8HOSE X 1/4MPT	1
12	56022	BRACKET, WATER VALVE	1
13	10711	VALVE, BALL 1/2 FPT	1
14	80021	CONN., SWIVEL FEM. 3/4HOSE X 1/2MPT	1
15	10846	SCREW, CAP STSHW 1/4-20 X 1/2	2
16	10038	WASHER, LOCK 1/4 ZINC	2
17	86347	BRACKET, MULTI-VAC PORT 2-3"	1
18	65021	CAP/PLUG 2" RED PLASTIC, FLANGED	1
19	77113	HOSE, FLEX 2"ID X 32"L, GRINDERS	1
20	10766	CLAMP, HOSE, SAE #32, ADJ. TO 2-1/2	2




Printed in USA

JWA ©2016


Page 9

ILLUSTRATION 4: GEAR CASE GROUPING

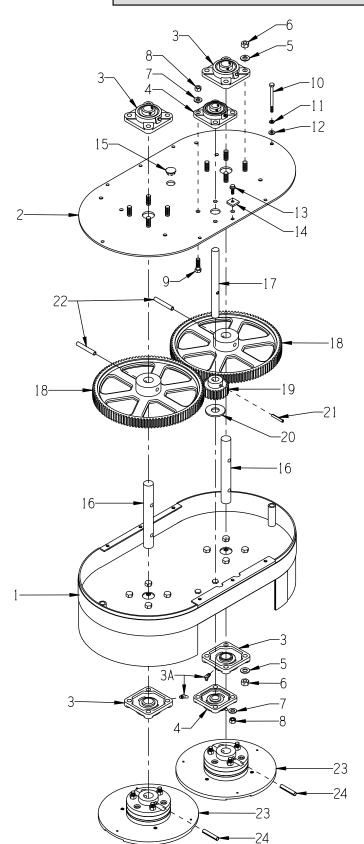

DISC ORIENTATION

INSTALL DISC IN OPPOSITE DIRECTIONS SO THEY WILL PASS EACH OTHER AT THE CENTER IN A ALTERNATING SEQUENCE.

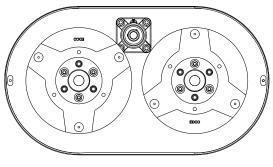

BOTTOM VIEW

	PARTS LISTIN	IG - ILLUSTRATION 4: GEAR CASE GROUPING	
ITEM#	PART#	DESCRIPTION	QTY.
1	77612	GEAR CASE	1
2	77613	GEAR CASE COVER	1
3	77008	BEARING, BALL 1" 4-HOLE FLANGE, ND	4
3A	10960	FITTING, GREASE 1/4-28 X 45° NOTE: A STRAIGHT FITTING IS INCLUDED WITH THE BEARINGS. THE 2 BEARINGS ON THE BOTTOM HAVE THE FITTINGS CHANGED.	2
4	77009	BEARING, BALL 3/4" 4-HOLE FLANGE	2
5	10450	WASHER, LOCK 7/16 ZINC	16
6	10481	NUT, HEX 7/16-20 ZINC	16
7	10811	WASHER, LOCK 3/8 ZINC	8
8	10014	NUT, HEX 3/8-24 ZINC	8
9	10309	SCREW, CAP 3/8-24 X 1-1/4 ZINC	4
10	10475	SCREW, CAP 1/4-20 X 3-1/4	2
11	10038	WASHER, LOCK 1/4 ZINC	2
12	10602	WASHER, FLAT 1/4 SAE ZINC	2
13	11811	BOLT, FLANGE 1/4-20 X 3/4 ZINC	6
14	77631	HOOD SPACER	1
15	10005	PLUG, HOLE 7/8" BRIGHT ZINC	1
16	77013	SHAFT, LARGE GEAR 1"DIA X 7-13/16"L	2
17	77626	SHAFT, PINION GEAR 3/4DIA X 8-3/8"L	1
18	77012	GEAR, SPUR 112 TOOTH (DRIVEN)	2
19	77053	GEAR, SPUR 25 TOOTH (PINION)	1
20	10009	WASHER, FLAT 3/4 SAE ZINC	1
21	10037	PIN, ROLL 1/4 X 1-1/2	1
22	10007	PIN, ROLL 3/8 X 2-1/2	2
23	86391A	10" MAGNA-TRAP DISC ASSY. W/ HUB (REFER TO ILLUS. 5 FOR BREAKDOWN)	2
24	10063	PIN, ROLL 3/8 X 2	2



ILLUSTRATION 5: 10" MAGNA-TRAP™ DISC ASSEMBLY


PART # 86391A



* QUANTITIES ARE PER EACH DISC ASSEMBLY. THERE ARE 2 DISC ASSEMBLIES PER MACHINE.

ITEM#	PART#	DESCRIPTION	QTY.*
1-10	86391A	10" MAGNA-TRAP DISC ASSY. W/ HUB (INCLUDES ALL ITEMS 1 THRU 10)	1
1	86391	10" MAGNA-TRAP DISC W/ MAGNETS (INCLUDES ITEMS 1A, 1B AND 1C)	1
1A	36064	MAGNET, NEODYMIUM RING 7/8 X 1/8	3
1B	10647	SCREW, FLAT HD PHILLIPS 8-32 X 1/2	3
1C	10462	NUT, KEPS LOCK 8-32 ZINC	3
2	10112	RING, RUBBER, 4-1/2"OD X 1/2"THK	2
3	77020	RING, HUB CARRIER, 6-HOLE	1
4	77010	HUB, ALUMINUM 6-HOLE (GRINDER)	1
5	10354	SCREW, SKT. HD. CAP 3/8-24 X 1-3/4	3
6	10012	SCREW, SKT. HD. CAP 3/8-24 X 2	3
7	10113	SPACER, STEEL 9/16OD X 3/8ID X 7/32	3
8	10011	SPACER, STEEL 5/8OD X 3/8ID X 3/8T	6
9	10058	NUT, HEX LOCK 3/8-24 W/ NYLON PATCH	3
10	11725	NUT, HEX JAM 3/8-24 ZINC (USE RED LOCTITE)	3


ILLUSTRATION 6: OPTIONAL DIAMOND DISC ADAPTER

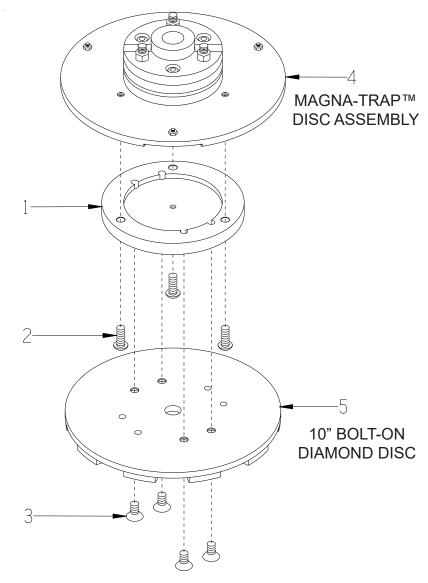

ITEM#	PART#	DESCRIPTION	QTY.*		
1	77618	ADAPTER, DIAMOND DISC (INCLUDES ITEM 2)	1		
2	10855	SCREW, SKT. BUTTON HD 3/8-24 X 1	3		
3	86108	SCREW, FLAT HD SKT 3/8-24 X 3/4 (NOT INCLUDED)	-		
4	86391A	10" MAGNA-TRAP DISC ASSY. W/ HUB (NOT INCLUDED)	-		
5		DIAMOND DISC (NOT INCLUDED)	-		
		REFER TO PRODUCT CATALOG FOR OPTIONS.			
	* QUANTITIES ARE PER EACH DISC ASSEMBLY.				
	THERE ARE 2 DISC ASSEMBLIES PER MACHINE.				



ILLUSTRATION 7: MOTOR & BELT DRIVE GROUPING FOR 1.5HP 60Hz UNITS

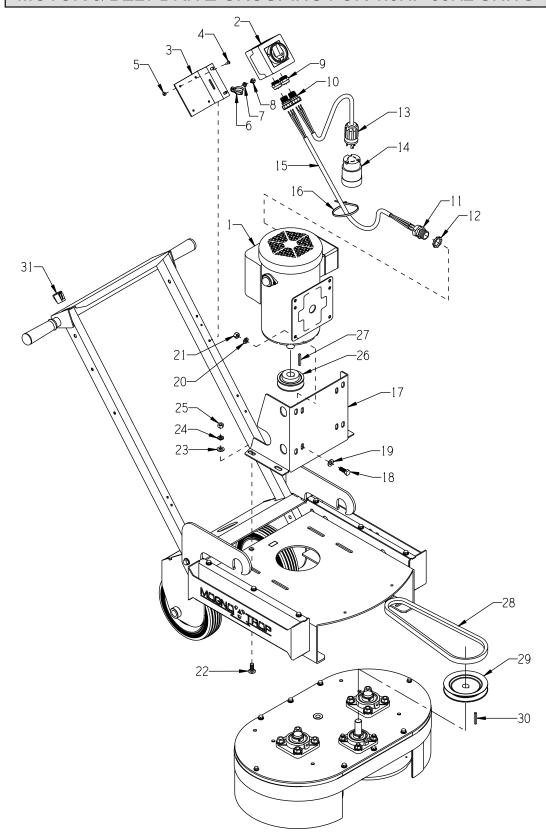




PARTS LISTING - ILLUSTRATION 7: MOTOR & BELT DRIVE GROUPING FOR 1.5HP 60Hz UNITS			
ITEM#	PART#	DESCRIPTION	QTY.
1	16083 40051 16547 16101	MOTOR, BALDOR 1.5HP-1P-60HZ-115/230V-1725RPM BALDOR CAT. NO. L3514TM REPLACEMENT PARTS: CAPACITOR, START, 645-774MFD, 125V EC1645A06SP CAPACITOR, RUN, 15MFD/370V, OC3015F12SP RESET BUTTON, BALDOR TPCRT31CASP	1 1 1 1
2	77043	SWITCH, ROTARY CAM ON/OFF, LOVATO	1
3	77042	BRACKET, LOVATO ROTARY CAM SWITCH	1
4	11663	SCREW, MACHINE 8-32 X 1/2 (LOCATED INSIDE OF SWITCH BOX)	4
5	10462	NUT, KEPS LOCK 8-32 ZINC	4
6	11690	CLAMP, LOOM, 3/8"	1
7	10038	WASHER, LOCK 1/4 ZINC	2
8	10846	SCREW, CAP STSHW 1/4-20 X 1/2	2
9	77043-1	SWITCH ADAPTER, PG16 TO 1/2"NPT	2
10	40066	STRAIN RELIEF 1/2NPT X .350450"	2
11	16176	STRAIN RELIEF 3/4NPT X .350450"	1
12	10740	CONDUIT LOCK NUT 3/4 NP	1
13	77044	PLUG W/ 12/3 WIRE HARNESS, LOCKING	1
14	40041	CONNECTOR, LOCKING 20A/125V L5-20C	1
15	77045	WIRE HARNESS 12/3 X 42"LOA	1
16	10982	TIE, CABLE, BLACK NYLON 11-1/4"	2
17	77037	MOUNT, MOTOR	1
18	10806	SCREW, CAP 5/16-18 X 1	4
19	10213	WASHER, FLAT 5/16 SAE ZINC	4
20	10801	WASHER, LOCK 5/16 ZINC	4
21	10054	NUT, HEX 5/16-18 ZINC	4
22	10802	BOLT, CARRIAGE 3/8-16 X 1 ZINC	4
23	10025	WASHER, FLAT 3/8 SAE ZINC	4
24	10811	WASHER, LOCK 3/8 ZINC	4
25	10404	NUT, HEX 3/8-16 ZINC	4
26	77017	SHEAVE 3"OD X 1GR.B X 7/8"BORE	1
27		KEY 3/16SQ X 1-3/8 (INCLUDED W/ MOTOR)	1
28	10035	BELT 5L-330 OR B30	1
29	3654	SHEAVE 5"OD X 1GR.B X 3/4"BORE	1
30	10016	KEY 3/16SQ X 1-1/2	1
31	15204	PLUG, RECT. HOLE, PLASTIC SNAP-IN	1



ILLUSTRATION 8: MOTOR & BELT DRIVE GROUPING FOR 2HP 50Hz UNITS

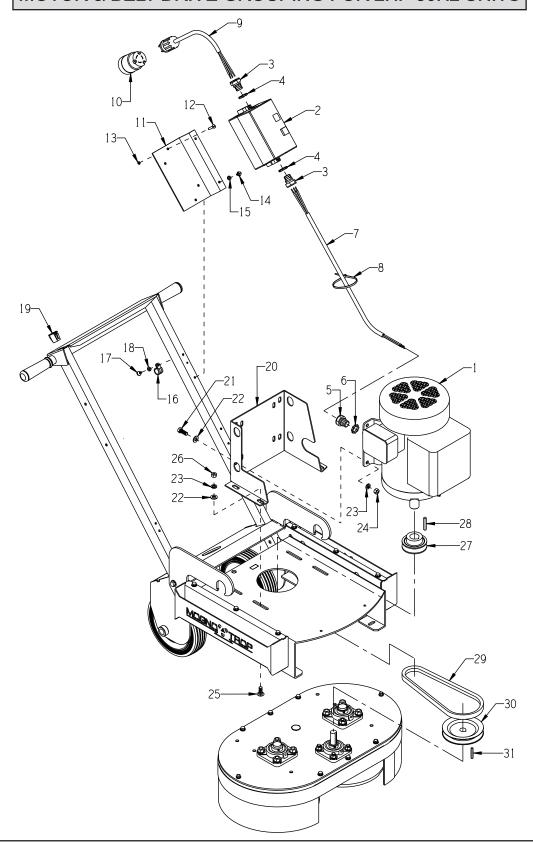




	·			
	PARTS LISTING - ILLUSTRATION 8: MOTOR & BELT DRIVE GROUPING FOR 2HP 50Hz UNITS			
ITEM#	PART#	DESCRIPTION	QTY.	
1	16019 40051	MOTOR, BALDOR 2HP-1PH-50HZ-110/220V-20/10A BALDOR CAT. #L3605T-50 REPLACEMENT PARTS: CAPACITOR, START, 645-774MFD 125V	1 1	
	16164	CAPACITOR, RUN, 40MFD 370V	1	
2	16470 16460	STARTER ACI #128839, 110V 50Hz 17.5-21.5A OL STARTER ACI #128840, 220V 50Hz 9.0-12.5A OL REPLACEMENT FACILISTS:	1 1	
	16616 16617 16621 16622 16634 16637 16652	STARTER CONT./COIL ACI SK18.310-120 STARTER CONT./COIL ACI SK18.310-230 STARTER AC COIL 120V-60HZ/110V-50HZ STARTER AC COIL 200/240V-60HZ, 190/220-50HZ STARTER OVERLOAD RELAY 9.0-12.5 AMP STARTER OVERLOAD RELAY 17.5-21.5A STARTER BOX ONLY HNFS18-20	1 1 1 1 1 1	
3	41130	STRAIN RELIEF 1/2NPT X .550650"	2	
4	10790	CONDUIT LOCK NUT 1/2 NP (LOCATED INSIDE THE STARTER BOX)	2	
5	16176	STRAIN RELIEF 3/4NPT X .350450"	1	
6	10740	CONDUIT LOCK NUT 3/4 NP	1	
7	77045	WIRE HARNESS 12/3 X 42"LOA	1	
8	10982	TIE, CABLE, BLACK NYLON 11-1/4"	1or2	
9	77044	PLUG W/ 12/3 WIRE HARNESS, LOCKING	1	
10	40000	CONNECTOR, LOCKING 20A/250V L6-20C	1	
11	86027	MOUNTING BRKT., STARTER	1	
12	11732 10384	SCREW, MACHINE 10-32 X 1-3/4 RHP SCREW, MACHINE 10-32 X 1 RHP (INSIDE BOX)	2 1	
13	10832	NUT, KEPS LOCK 10-32 ZINC	2	
14	10846	SCREW, CAP STSHW 1/4-20 X 1/2	2	
15	10038	WASHER, LOCK 1/4 ZINC	2	
16	11690	CLAMP, LOOM, 3/8"	1	
17	10877	SCREW, CAP STSHW 10-24 X 1/2	1	
18	10831	WASHER, LOCK, INT. TOOTH #10	1	
19	15204	PLUG, RECT. HOLE, PLASTIC SNAP-IN	1	
20	77037	MOUNT, MOTOR	1	
21	10021	SCREW, CAP 3/8-24 X 1	4	
22	10025	WASHER, FLAT 3/8 SAE ZINC	8	
23	10811	WASHER, LOCK 3/8 ZINC	8	
24	10014	NUT, HEX 3/8-24 ZINC	4	
25	10802	BOLT, CARRIAGE 3/8-16 X 1 ZINC	4	
26	10404	NUT, HEX 3/8-16 ZINC	4	
27	77030	SHEAVE 3"OD X 1GR.B X 1-1/8"BORE	1	
28		KEY 1/4SQ X 1.75 (INCLUDED W/ MOTOR)	1	
29	10047	BELT 5L-300 OR B27	1	
30	3654	SHEAVE 5"OD X 1GR.B X 3/4"BORE	1	
31	10016	KEY 3/16SQ X 1-1/2	1	



ILLUSTRATION 9: MOTOR & BELT DRIVE GROUPING FOR 3HP 60Hz UNITS

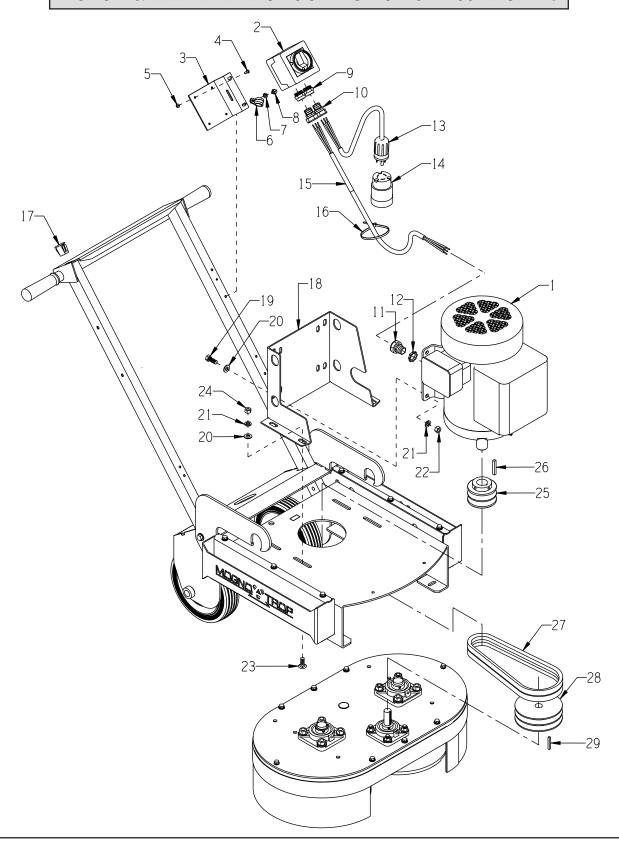



		PARTS LISTING - ILLUSTRATION 9: SELT DRIVE GROUPING FOR 3HP 60Hz UNITS	
ITEM#	PART#	DESCRIPTION	QTY.
1	16082	MOTOR, BALDOR 3HP-1PH-60HZ-1725RPM-230V-14.5A BALDOR CAT. #L3609TM REPLACEMENT PARTS: CAPACITOR, START, 125V EC1815A06	1
	16561 16536	CAPACITOR, START, 125V EC1815A06 CAPACITOR, RUN, 60MFD 370V OC3060F10	1 1
	16562	RESET BUTTON TPBRJ35DB	1
2	77043	SWITCH, ROTARY CAM ON/OFF	1
3	77042	BRACKET, ROTARY CAM SWITCH	1
4	11663	SCREW, MACHINE 8-32 X 1/2 (LOCATED INSIDE OF SWITCH BOX)	4
5	10462	NUT, KEPS LOCK 8-32 ZINC	4
6	11690	CLAMP, LOOM, 3/8"	1
7	10038	WASHER, LOCK 1/4 ZINC	2
8	10846	SCREW, CAP STSHW 1/4-20 X 1/2	2
9	77043-1	SWITCH ADAPTER, PG16 TO 1/2"NPT	2
10	40066	STRAIN RELIEF 1/2NPT X .350450"	2
11	16176	STRAIN RELIEF 3/4NPT X .350450"	1
12	10740	CONDUIT LOCK NUT 3/4 NP (LOCATED INSIDE OF THE JUNCTION BOX))	1
13	77044	PLUG W/ 12/3 WIRE HARNESS, LOCKING	1
14	40041	CONNECTOR, LOCKING 20A/125V L5-20C	1
15	77045	WIRE HARNESS 12/3 X 42"LOA	1
16	10982	TIE, CABLE, BLACK NYLON 11-1/4"	2
17	15204	PLUG, RECT. HOLE, PLASTIC SNAP-IN	1
18	77037	MOUNT, MOTOR	1
19	10021	SCREW, CAP 3/8-24 X 1	4
20	10025	WASHER, FLAT 3/8 SAE ZINC	8
21	10811	WASHER, LOCK 3/8 ZINC	8
22	10014	NUT, HEX 3/8-24 ZINC	4
23	10802	BOLT, CARRIAGE 3/8-16 X 1 ZINC	4
24	10404	NUT, HEX 3/8-16 ZINC	4
25	79023	SHEAVE 3"OD X 2GR.B X 1-1/8"BORE	1
26		KEY 1/4SQ X 1.75 (INCLUDED W/ MOTOR)	1
27	10047	BELT 5L-300 OR B27	2
28	77058	SHEAVE 5"OD X 2GR.B X 3/4"BORE	1
29	10016	KEY 3/16SQ X 1-1/2	1




Printed in USA

JWA ©2016

Page 19

ILLUSTRATION 10: ENGINE & BELT DRIVE GROUPING FOR HONDA GXV340

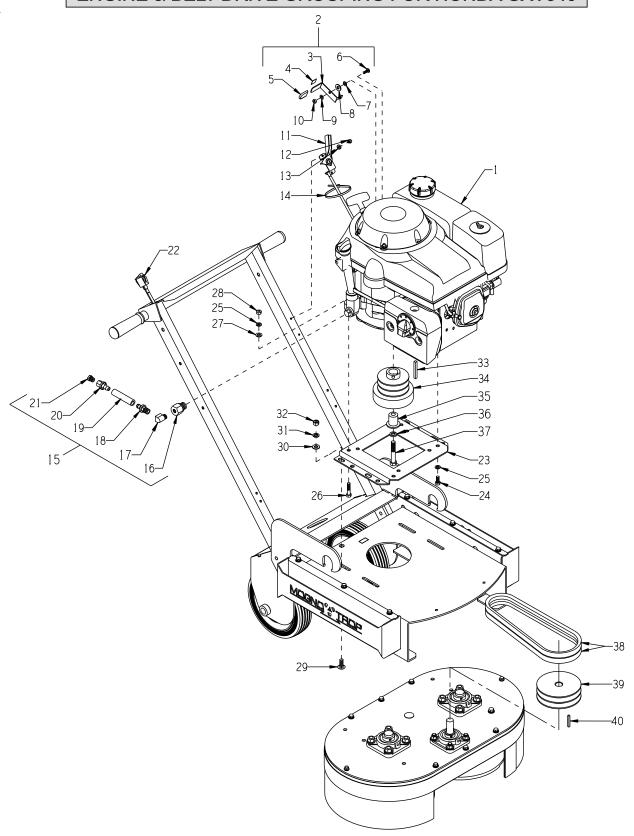


EQUIPMENT DEVELOPMENT COMPANY, INC.100 Thomas Johnson Drive, Frederick, MD 21702-4600 USA



ITEM //	ENGINE & E	ARTS LISTING - ILLUSTRATION 10: BELT DRIVE GROUPING FOR HONDA GXV340	OTV
ITEM#	PART # 76004	DESCRIPTION ENGINE, HONDA MODELGXV340UT2-DX3	QTY.
2	15190	·	1 1
		MANUAL CHOKE KIT (INCLUDES ITEMS 3 THRU 10)	
3	15183	LEVER, CHOKE CONTROL, GXV340	1
4	91301	DECAL, CHOKE 5/8 X 5/8 CAP, FLAT RED .062 X .75 X 1	1 1
5 6	15184	SCREW, MACHINE M6 X 16MM PHILLIP HD	1 1
7	15185 15188	· ·	1 1
8	15187	WASHER .265"ID,.50"OD,.029035"THK WASHER, FIBER .75 X .25 X .093	1 1
9		· ·	1 1
	15186	WASHER, BELLEVILE .500 X.255 X.018	
10	28026	NUT, HEX NYLON LOCK M6 X 1MM CABLE, THROTTLE, LEVER-TYPE 24"	1 1
11	40388		1
12	10877	SCREW, CAP STSHW 10-24 X 1/2	2
13	10831	WASHER, LOCK, INT. TOOTH #10 TIE, CABLE, BLACK NYLON 11-1/4"	2 2
14 15	10982	OIL DRAIN KIT. 2GC-NG-11H (INCLUDES ITEMS 16 THRU 21)	1
16	77628 11689	ADAPTER. 20MM X 1.5 TO 1/4FPT	1
		7 1 2 2 2	
17 18	10730	ELBOW, STREET 1/4NPT X 90 (BRASS)	1 1
	10657	BARB, PUSH-ON 3/8 HOSE X 1/4MPT	_
19	72106	HOSE, PUSH-ON 3/8"ID X 2"L	1
20	11544	BARB, PUSH-ON 3/8 HOSE X 1/4FPT	1 1
	10776	PIPE PLUG 1/4 NPT (BRASS)	_
22	15201A	SWITCH W/ WIRES, ROCKER RED ON-OFF ADDITIONAL PARTS REQ'D. (NOT SHOWN):	1
	50084	TERM., RING #10 16-14GA. INSULATED	1
	10831 10877	WASHER, LOCK, INT. TOOTH #10 SCREW. CAP STSHW 10-24 X 1/2	1 1
	10970	CONN., WIRE QUICK-SPLICE 18-14 GA.	1
23	76023	MOUNT, ENGINE, VERT. SHAFT	1
24	10048	SCREW, CAP 5/16-24 X 3/4	2
25	10801	WASHER, LOCK 5/16 ZINC	4
26	10606	SCREW, CAP 5/16-18 X 1-1/4	2
27	10213	WASHER, FLAT 5/16 SAE ZINC	4
28	10054	NUT, HEX 5/16-18 ZINC	4
29	10802	BOLT, CARRIAGE 3/8-16 X 1 ZINC	4
30	10025	WASHER, FLAT 3/8 SAE ZINC	4
31	10811	WASHER, LOCK 3/8 ZINC	4
32	10404	NUT, HEX 3/8-16 ZINC	4
33	10307	KEY 1/4SQ X 2-1/4	1
34	76024	CLUTCH, CENTRIFUGAL 3.5 X 2GR X 1	1
35	77627	CLUTCH PLUG, 2GC-NG & TLR-7	1
36	10450	WASHER, LOCK 7/16 ZINC	1
37	11750	SCREW, CAP 7/16-20 X 2-3/4 ZINC	1
38	10035	BELT 5L-330 OR B30	2
39	77058	SHEAVE 5"OD X 2GR.B X 3/4"BORE	1
40	10016	KEY 3/16SQ X 1-1/2	1
		*	




WIRING DIAGRAM FOR ROTARY CAM SWITCH

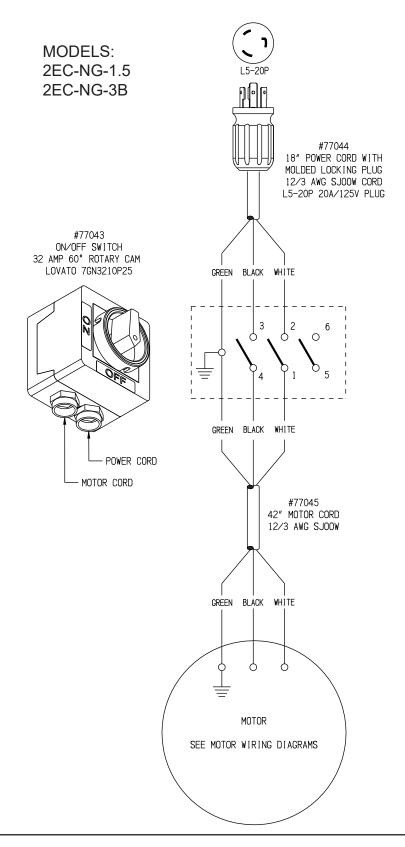



WIRING DIAGRAM FOR ACI STARTER

MODEL 2EC-NG-2B/50

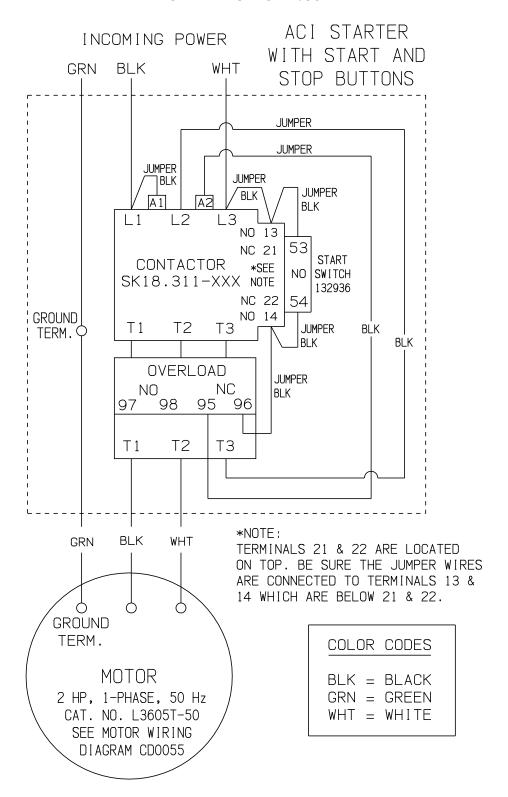



WIRING DIAGRAM FOR BALDOR L3514TM MOTOR


MODEL 2EC-NG-1.5

BALDOR CAT. NO. L3514TM 1.5 H.P., 1 PHASE, 60 HERTZ, 1725 RPM, 115/230 VOLT, 16/8 FULL LOAD AMPS

USE CONNECTIONS FOR OPPOSITE ROTATION SHOWN BELOW IN CHART. FACTORY CONNECTIONS ARE LOW OPP. (115V).

> LINE A LINE B JOIN JOIN JOIN HIGH STD 2,3 8,9 J**,**5 HIGH OPP 2,3 5,9 J,8 LOW STD 1,3 4 8.9 2,J,5 LOW OPP 1,3 5,9 2,J,8

CD0016A02

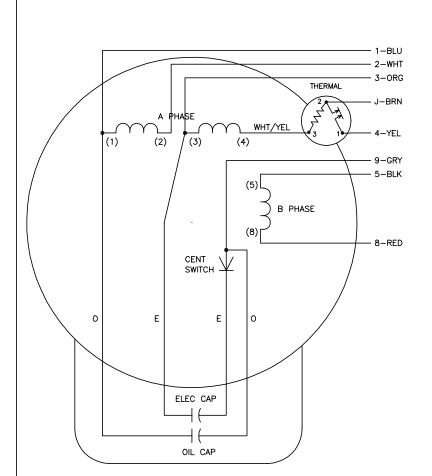

NOTES:

- STANDARD ROTATION IS CCW FACING END OPPOSITE SHAFT EXTENSION.
- 2. MULTIPLE CAPACITORS ARE CONNECTED IN PARALLEL UNLESS OTHERWISE SPECIFIED.
- 3. LEAD COLORS ARE OPTIONAL. LEADS MUST ALWAYS BE NUMBERED AS SHOWN.

BALDOR ELECTRIC Co.

TYPE LC, DV, REV, OIL CAP ACR. LINE, THERMAL, 8 LEADS


CD0016A02

WIRING DIAGRAM FOR BALDOR L3605T-50 MOTOR

MODEL 2EC-NG-2B/50

BALDOR CAT. NO. L3605T-50 2 H.P., 1 PHASE, 50 HERTZ, 1425 RPM, 110/220 VOLT, 20/10 FULL LOAD AMPS

USE CONNECTIONS FOR OPPOSITE ROTATION SHOWN BELOW IN CHART.

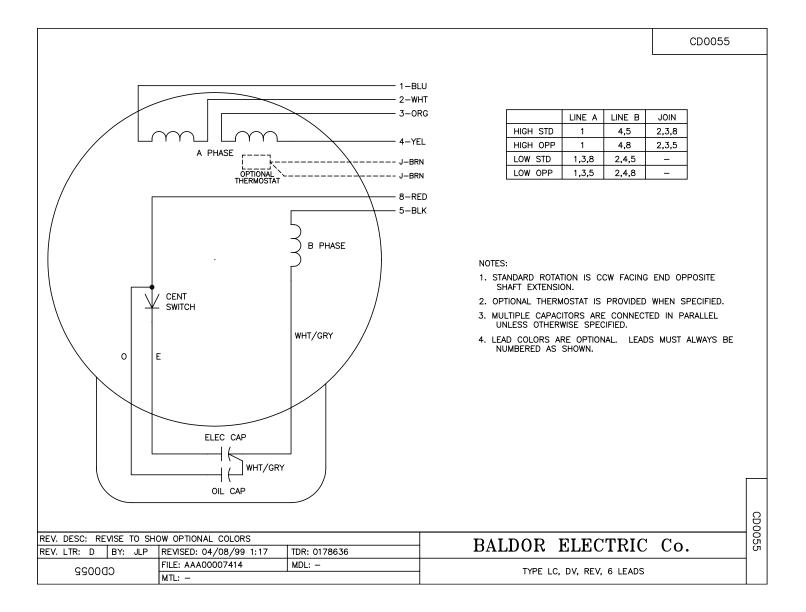




WIRING DIAGRAM FOR BALDOR L3609TM MOTOR

MODEL 2EC-NG-3B

BALDOR CAT. NO. L3609TM 3 H.P., 1 PHASE, 60 HERTZ, 1725 RPM, 115/230 VOLT. 28/14.5 FULL LOAD AMPS


USE CONNECTIONS FOR OPPOSITE ROTATION SHOWN BELOW IN CHART. FACTORY CONNECTIONS ARE HIGH OPP. (230V).

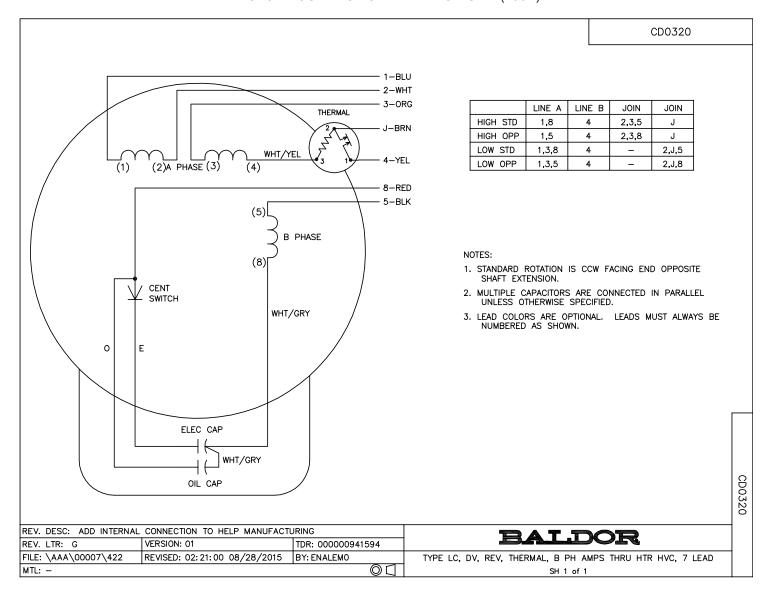



WIRING DIAGRAM FOR HONDA GXV340 ENGINE

MODEL 2GC-NG-11H

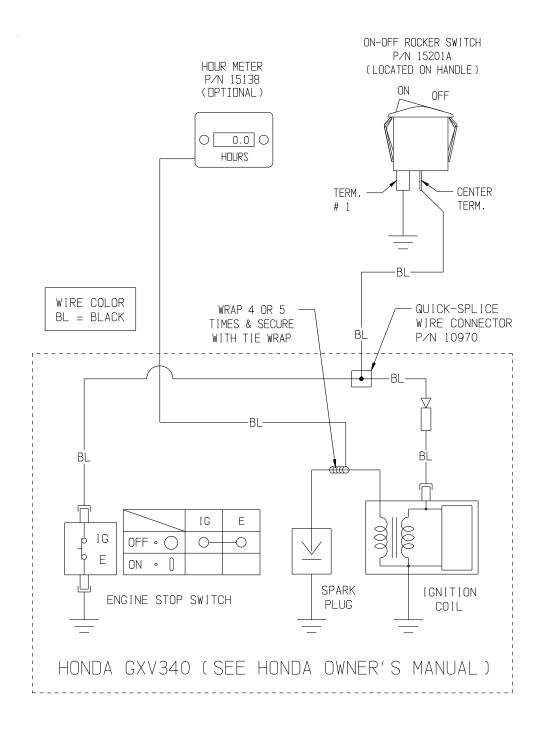



DECAL SHEET 1

P/N 92201 Rev.D

2EC, 2EC-NG, 2GC, & 2GC-NG

14 x17 SHEET







A CAUTION

GENERATOR SIZE REQUIREMENT

RATE GENERATOR AT 3 TIMES MOTOR RATED HORSEPOWER







Do not change position of voltage selector switch while machine is in operation.



Change plug and protective fuse when changing voltage Be sure equipment is properly grounded





THROTTLE CHECK OIL DAILY

exceeds 85dBA







WARNING
THERE IS NO OIL IN THIS MACHINE












EQUIPMENT DEVELOPMENT COMPANY, INC.

©2016 JWA Page 28

Printed in USA



DECAL SHEET 2

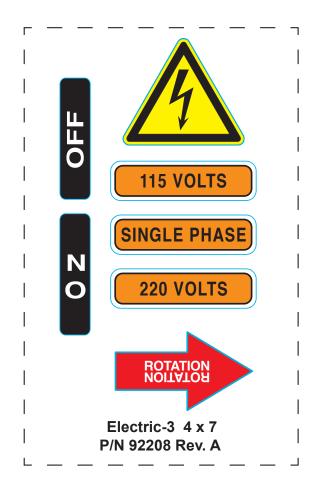



E-2ECGCNG-PL-1116

THIS PAGE WAS LEFT BLANK INTENSIONALLY



NOTES

Record here any repairs or changes made to the Equipment				



LIMITED EQUIPMENT WARRANTY OF SALE - TERMS & CONDITIONS

Equipment Development Company, Inc. herein referred to as EDCO (Seller) warrants that each new unit manufactured by EDCO to be free from defects in material and workmanship in normal use and service for a period of (1) one year (except for the cutter drum assembly on all model concrete/asphalt planes, in which case the warranty period shall be 90 days) from date of shipment to the original retail or equipment rental center owner.

Accessories or equipment furnished and installed on the product by EDCO but manufactured by others, including, but not limited to engines, motors, electrical components, transmissions etc., shall carry the accessory manufacturers own warranty.

EDCO will, at its option, repair or replace, at the EDCO factory or at a point designated by EDCO, any part which shall appear to the satisfaction of EDCO inspection to have been defective in material or workmanship.

EDCO reserves the right to modify, alter and improve any part or parts without incurring any obligation to replace any part or parts previously sold without such modified, altered or improved part or parts.

This warranty is in lieu of and excludes all other warranties, expressed, implied, statutory, or otherwise created under applicable law including, but not limited to the warranty of merchantability and the warranty of fitness for a particular purpose in no event shall seller or the manufacturer of the product be liable for special, incidental, or consequential damages, including loss of profits, whether or not caused by or resulting from the negligence of seller and/or the manufacturer of the product unless specifically provided herein. In addition, this warranty shall not apply to any products or portions there of which have been subjected to abuse, misuse, improper installation, maintenance, or operation, electrical failure or abnormal conditions and to products which have been tampered with, altered, modified, repaired, reworked by anyone not approved by seller or used in any manner inconsistent with the provisions of the above or any instructions or specifications provided with or for the product

FORCE MAJEURE

Seller's obligation hereunder are subject to, and Seller shall not be held responsible for, any delay or failure to make delivery of all or any part of the Product due to labor difficulties, fires, casualties, accidents, acts of the elements, acts of God, transportation difficulties, delays by a common carrier, inability to obtain Product, materials or components or qualified labor sufficient to timely perform part of or all of the obligations contained in these terms and conditions, governmental regulations or actions, strikes, damage to or destruction in whole or part of manufacturing plant, riots, terrorist attacks or incidents, civil commotions, warlike conditions, flood, tidal waves, typhoon, hurricane, earthquake, lightning, explosion or any other causes, contingencies or circumstances within or without the United States not subject to the Seller's control which prevent or hinder the manufacture or delivery of the Products or make the fulfillment of these terms and conditions impracticable. In the event of the occurrence of any of the foregoing, at the option of Seller, Seller shall be excused from the performance under these Terms and Conditions, or the performance of the Seller shall be correspondingly extended.

This document sets forth the terms and conditions pursuant to which the purchaser ("Purchaser") will purchase and Equipment Development Co.lnc. ("Seller") will sell the products, accessories, attachments (collectively the Products ") ordered by the Purchaser. These terms and conditions shall govern and apply to the sale of Seller's Products to Purchaser, regardless of any terms and conditions appearing on any purchase order or other forms submitted by Purchaser to Seller, or the inconsistency of any terms therein and herein.

1. PRICE

All prices set forth on any purchase order or other document are F.O.B. Sellers facility or distribution point, as may be determined by Seller (F.O.B.Point). All prices are exclusive of any and all taxes, including, but not limited to, excise, sales, use, property or transportation taxes related to the sale or use of the Products, now or hereafter imposed, together with all penalties and expenses. Purchaser shall be responsible for collecting and/or paying any and all such taxes, whether or not they are stated in any invoice for the Products. Unless otherwise specified herein, all prices are exclusive of inland transportation, freight, insurance and other costs and expenses relating to the shipment of the Products from the F.O.B. point to Purchaser's facility. Any prepayment by Seller of freight insurance and other costs shall be for the account of Purchaser and shall be repaid to Seller.

2 PAYMENT TERMS

Payment terms are as follows. 2% 10 days (to approved and qualified accounts). Net 30 days. This is a cash discount for invoices paid within 10 days after the invoice date, regardless of date of receipt of shipment. This is not a trade discount and will not be granted to accounts that do not adhere to stated terms.

*All past due accounts are subject to a late payment fee of 1.5% per month or a maximum allowed by law if different, along with the expenses incidental to collection including reasonable attorney's fees and costs.

*Seller reserves the right to hold shipments against past due accounts.

*Seller reserves the right to alter payment terms.

3. FREIGHT TERMS

All shipments will be made F.O.B. shipping point as designated in these Terms and Conditions, and title shall pass at the F.O.B. point. Delivery to the initial common carrier shall constitute delivery to the Purchaser. Any claims for loss or damage during shipment are to be filed with carrier by the Purchaser. Seller will not assume responsibility for the performance of the carrier.

Back orders will be shipped in the most practical fashion with charges consistent with our freight policy established with the original order. UPS, FED EX, MAIL or shipments by other couriers are subject to the same terms and conditions as outlined in paragraph #3"Freight Terms".

4. DELIVERY, DAMAGES, SHORTAGES

Seller shall use reasonable efforts to attempt to cause the Products to be delivered as provided for in these Terms & Conditions. Delivery to the initial common carrier shall constitute the delivery to the Purchaser. Sellers responsibility, in so far as transportation risks are concerned ceases upon the delivery of the Products in good condition to such carrier at the F.O.B. point and all the Products shall be shipped at the Purchaser's risk. Seller shall not be responsible or liable for any loss of income and/or profits, or incidental, special, consequential damages resulting from Seller's delayed performance in shipment and delivery.

5. RETURN OF DEFECTIVE PRODUCTS

Defective or failed material shall be held at the Purchaser's premises until authorization has been granted by Seller to return or dispose of Products. Products that are to be returned for final inspection must be returned Freight Prepaid in the most economical way. Credit will be issued for material found to be defective upon Seller's inspection based on prices at time of purchase.

6. PRODUCTS ORDERED IN ERROR

Products may be returned, provided that claim is made and Seller is notified within 7 days of receipt of Products, and the Products are in original buyer's possession not more than 30 days prior to return, subject to Seller's approval. If Products are accepted for return, they must be Freight Prepaid and buyer will be charged a minimum of 15% restocking charge, plus a charge back for outbound freight charges if the original order was shipped prepaid. Returns are not accepted for any Products that are specifically manufactured to meet the buyer's requirement of either specifications or quantity.

AGREEMENTS

These Terms and Conditions constitute the entire agreement between Seller and Purchaser as it relates to terms and conditions of sale, and supersedes any and all prior oral or written agreements, correspondence, quotations or understandings heretofore in force between the parties relating to the subject matter hereof. There are no agreements between Seller and Purchaser with respect to the Product herein except those specifically set forth in and made part of these terms and conditions. Any additional terms, conditions and/or prices are rejected by Seller.

These terms and conditions may be modified, cancelled or rescinded only by a written agreement of both parties executed by their duly authorized agents.

USE ONLY GENUINE EDCO PARTS & ACCESSORIES For your own safety, the safety of others and the life of your machine.

Equipment Development Company, Inc.



100 Thomas Johnson Drive, Frederick, MD 21702-4600 USA
Phone: 800-638-3326 or 301-663-1600 • Fax: 800-447-3326 or 301-663-1607
Website: www.edcoinc.com • E-mail: sales@edcoinc.com

